

# How To Guide

## 2016 170 Versatile



## HOW TO: Cable and TV Reception

---

Your Roadtrek comes with a home theatre system. This consists of a TV, a DVD player, the speaker system and the radio in the dash, along with a rooftop TV antenna and a cable TV connection.

The TV and home theatre system are located in the rear on the passenger side. The Cable TV/Antenna switch and power injector for the built-in antenna are in the cabinet just above the DVD player.

The TV and the home theatre system must be on to use the system. Both the television and the DVD player use 120 volt current, so the inverter, generator, or shore power must be used. Refer to the Electrical System for instructions on 120VAC power.

The TV and DVD are supplied with remote controls.

The home theatre system has inputs for media devices. Read the Owner's manual for full details.



TV Bracket release



DVD player



TV antenna switch

The TV is stowed against the wall on a hinged bracket. The bracket is secured with a large thumbscrew. Turn the thumbscrew horizontally to release the bracket and vertically to secure the bracket to the wall.

Once released, you can swing the TV to a comfortable viewing position.



Always stow the TV with the bracket secured to the wall for travel.

## **Over-the-air TV**

To watch TV using the Roadtrek rooftop antenna:

- Have 120 volt AC power available (inverter on OR shore power plugged in OR generator running)
- Turn on TV and home theatre system
- Make sure the power injector is on (the barrel connector is plugged into the top of the injector)
- Set the speaker selector to "SURROUND"
- Set the antenna/cable AB Switch to antenna by pressing the top button

## **DVD**

To watch a DVD:

- Have 120 volt AC power available (inverter on OR shore power plugged in OR generator running)
- Turn on TV and home theatre system
- Set the speaker selector to "SURROUND"

## Cable TV

To connect your Roadtrek to cable TV at a campsite or even in your driveway, first locate the Roadtrek's cable TV connection. It has a square gray plastic cover about 3 cm on each side which is hinged at the top, and opens to expose the barrel connector the cable hooks to.



Cable TV connection location



Coaxial TV connecting wire with screw-on end

You need a length of coaxial TV cable to reach from the cable TV outlet to your Roadtrek's connection point. These are sold in electronic supply and camping supply stores and come in lengths of 25, 50, and 100 feet. The cable is typically sold as RG-59U or RG-6 with F-type connectors. The RG-6 is preferable but either will work.



TV cable connected



antenna/cable AB switch selected for cable (bottom button)

Screw the cable onto the barrel connectors at each end. If you loop it underneath the crossbar at the bottom of the compartment door opening, you can close the compartment door without crimping the wire.

Push the bottom button on the antenna/cable AB switch in the cabinet above the TV. The bottom button connects your TV to the cable connection, and the top button connects it to the over-the-air signals from your rooftop antenna.

### **Speaker Switch**

The speaker switch is located in the same cabinet as the Cable/Antenna switch. You can select Surround, Off, or Automotive.

In the Surround position, the rear speakers (the speakers above the bed) will work with the TV/home theatre system. In the Off position the speakers are off. In the Automotive position, the speakers are connected to the dash radio.



Rear speaker switch