

Zion

2020 OWNER'S MANUAL



www.roadtrek.com

Contents

Introduction to Your Zion.....	7
Disclaimer	7
Copyright	7
References	8
Do's and Don'ts.....	8
Symbol Legend	8
Regulatory Warnings	8
Information, Cautions and Warnings	9
Before You Head Out.....	11
Coming Home	12
Interior Living Space	13
Cabinets.....	13
Galley Cabinets	15
Lights	15
Tables	16
Front Table Setup	17
Rear Table Setup.....	18
Captain's Seats	18
Window Treatments	19
Ventilation	21
Sleeping Facilities	22
Side Facing Power Sofa	22

	3
Forward Facing Power Sofa	24
Bathroom Facilities	25
Door	25
Using the Toilet	25
Shower	26
Outside Shower	26
Appliances	27
TV and Home Theatre System	27
Antenna and Cable Connections	27
Refrigerator	27
Oven	28
Propane Cooktop	28
Hot Water	29
Outside Your Roadtrek	30
Awning	30
Exterior Shower	31
Side Doorstep	31
Rear Door Screen	32
Side Door Screen	33
Utilities	34
Fresh Water	34
City Water	34
Water Pump	35
Wastewater	35
Gray Tank	35
Black Tank	35

Indicators.....	4
Heating and Cooling.....	35
Thermostat.....	36
Air Conditioner.....	36
Propane Furnace.....	36
Electrical System.....	37
Coach Batteries.....	37
Battery Disconnect Switch.....	37
Charging Your Batteries.....	37
Inverter Charger.....	37
Alternator Charger and Battery Isolator.....	37
Optional Solar Panels.....	38
On Board 120 Volt AC Power.....	38
Standard 2000W Inverter.....	38
Optional Under hood Generator.....	38
Shore Power.....	39
Outlets.....	39
Monitor Panel.....	40
Location.....	40
Power Sources.....	40
12 Volt DC Power.....	40
Inverter.....	40
Shore Power.....	41
Other Switches.....	41
Patio Light.....	41
Awning Switch.....	41
Step Switch.....	41

	5
Water Pump Switch.....	42
Water Heater Switch	42
Tank Charge Indicators	43
Distribution Panel.....	44
AC Breaker	44
12 Volt Fuse Panel	44
Alarms and Warnings.....	45
Propane and CO Monitor.....	45
Smoke Detector.....	45
Fire Extinguisher.....	46
Maintenance.....	47
Tires	47
Cargo Carrying Capacity	47
Owner Maintenance Checks.....	47
When You Stop for Fuel or Weekly	47
Every Other Week.....	47
At Least Monthly	47
At Least Every Three Months	48
At Least Twice a Year	48
At Least Once a Year	49
Other Maintenance Checks	49
Tire Service Kit	50
Two (2)-year limited Warranty	51
Obtaining Service	54
Specifications	54

Roadtrek Service Warranty 6

Roadtrek Service Warranty 55

Aftermarket Disclaimer 56

Regulatory Notices 56

HOWTOs..... 56



This owner's manual was created to help owners with general use, maintenance and care of their RV. Roadtrek Inc., conducts ongoing product development and uses photos from multiple models and vehicles to create these instructions. The included images may not reflect exact makes and/or models however, the information remains relevant and useful. These instructions are provided as general guidelines only, as certain add-ons or customization to an RV may change the manner these operations are performed.

Introduction to Your Zion

Congratulations on the purchase of your Roadtrek and welcome to the Roadtrek Inc. family. The information included in this manual is meant to help and guide you using your vehicle so that you know how to properly use the many functions your Roadtrek has to offer.

Please keep this manual in your vehicle as a reference for when you are traveling. If you have any questions or comments on information found in this document, please contact us at manuals@roadtrekinc.com.

Copyright

Roadtrek Inc. reserves the right to make changes at any time, without notice in colors, materials, equipment, specifications and models. The information contained in this manual is intended as a guide only, as continuous improvements are ongoing. Please visit <https://www.roadtrek.com/owners/#section-manuals> for the most up to date manuals available. **Some motorhomes may be shown with equipment that is optional. Accessories shown in any photographs may not be included.**

This manual is released under a Creative Commons Attribution-Non-Commercial-No Derivatives 4.0 International License [1].

In summary, you may:

- Copy any portion of this manual in any form for personal use;
- Distribute this manual complete with all its original unmodified content;
- Modify this manual for your own personal, non-commercial use. You may not use this manual for any commercial use whatsoever;
- Modify this manual except as provided for in the full license and then distribute the resulting work;
- Charge for this manual other than reasonable media and shipping costs.

All images used in this manual remain the property of Roadtrek Inc. They are for illustrative purposes only and may or may not be representative of the upfits in your Roadtrek. Contact Roadtrek Inc. for alternate licensing arrangements if you want to use or distribute this manual commercially.

References

[1] <http://creativecommons.org/licenses/by-nc-nd/4.0/>

Do's and Don'ts

Symbol Legend



Information: Useful information and knowledge.



Warning: Not following this instruction may lead to negative results.



Caution: You should follow this instruction.



Danger: Do NOT perform this action. Doing so may result in injury, severe damage, or death.

Regulatory Warnings

LEVEL	ITEM	INSTRUCTION
	Warning	Do not place propane cylinders inside the vehicle. • Propane cylinders are equipped with safety devices that relieve excessive pressure by discharging propane to the atmosphere. • Propane gas is highly flammable. This action can lead to fire or explosion and result in death or serious injury.
	Danger	Do not use gas cooking appliances for comfort heating. • Can lead to carbon monoxide poisoning, which can lead to death or serious injury.
	Warning	Gas cooking appliances need fresh air for safe operation. • Open vents or windows slightly or turn on exhaust fan prior to using cooking appliance. • Gas flames consume oxygen, which should be replaced to ensure proper operation. • Improper use can result in death or serious injury.
	Caution	Do not fill propane containers to more than 80% of their capacity. • A properly filled container contains approximately 80 percent of its volume as liquid propane.

		• Overfilling propane container(s) can result in uncontrolled propane flow, which could lead to a fire or explosion and result in death or serious injury.
	Danger	If you smell propane: 1. Extinguish any open flames and all smoking materials. 2. Shut off propane supply at the container valve(s) or propane supply connection. 3. Do not touch electrical switches. 4. Open doors and other ventilating openings. 5. Leave the area until the odor clears. 6. Have the propane system checked and leakage source corrected before using again. 7. Ignition of flammable vapors could lead to a fire or explosion and result in death or serious injury.
	Danger	Vehicles and equipment powered by internal combustion engines and placed in recreational vehicles can cause carbon monoxide poisoning or asphyxiation, which could result in death or serious injury. • Do not store, transport, or dispense fuel inside this vehicle.

Information, Cautions and Warnings

LEVEL	ITEM	COMMENT
	Seat Belts	Use only seats equipped with factory installed seat belts while the vehicle is in motion. All passengers must be seated in these seats only, with the seat belts fastened while the vehicle is in motion.
	TV	Turn the TV off and stow it while the vehicle is in motion.
	TV	The flat screen TV should not be stored inside the Roadtrek in cold temperatures. Remove it to reduce the chance of damage from the cold. Check the Owner's Manual for the TV for storage and operating temperatures.
	TV	To remove the TV, release the bracket on the back of the TV mounting bracket and remove the RCA cables, power supply cable and antenna cable.
	Propane	Do not store propane tanks inside your vehicle. Propane tanks are equipped with safety devices which relieve excessive pressure by discharging gas to the atmosphere.
	Propane	Do not refuel the propane tank to more than 80% of its capacity.
	Propane	The propane tank valve must be closed and all pilot lights, appliances and their igniters must be turned off during refueling of the motor fuel tank and/or the propane fuel tank. Only qualified personnel should refuel your propane tank.
	Propane	Purchase propane from a reputable propane facility. Contaminated propane is a common cause of system failure and is not covered under any warranty.

	Propane	The BBQ quick disconnect is regulated to 10 P.S.I. Please ensure that all devices connected to this are either rated for high "pressure" or have their own regulator. Many grills sold in the United States are "low pressure" (1/2 P.S.I.) and will require an additional regulator to step the pressure down to a useable level. If hooked directly to the BBQ quick disconnect, they will be a severe fire hazard.
	Propane Leak Detector	Do not block the air circulation in the area where the Propane Leak Detector is located.
	Propane Leak Detector	Battery disconnect switch must be in the "ON" position for the propane detector to function.
	Flammable Liquids and Gasses	Do not store gasoline or other flammable liquids inside your vehicle.
	Heating	Never use cooking appliances or unvented propane heaters for space heating purposes. They need fresh air for safe operation.
	Heating	The heating furnace provides its own outside combustion air and exhausts to the outside.
	Heating	Portable fuel burning equipment, including wood, charcoal, and liquid fuel grills and stoves, should not be used inside your vehicle. Use of this type of equipment inside your vehicle may cause a fire or asphyxiation.
	Carbon Monoxide Leak Detector	Do not block the air circulation in the area where the Carbon Monoxide Leak Detector is located.
	Carbon Monoxide Leak Detector	Battery disconnect switch must be in the "ON" position for the Carbon Monoxide Leak Detector to function.
	110 V Electrical Servicing	Prior to servicing any 110 V, ensure that the power sources are disconnected.
	Exterior Access Doors	Ensure the shore power cord and city water supply lines are disconnected and in their stored positions before the vehicle is put in motion.
	Awning	Close the sliding side door prior to opening or closing the awning.
	Dining Table	When storing the dining table, secure in place using the snap-on strap.
	Extra Counter Space	Make sure the stove is off and has cooled prior to lowering the stove cover.
	Battery	Battery acid can burn your skin and damage clothing. Protective eye wear and gloves should be worn while handling batteries. Effective June 2010 all Roadtrek Inc. installed batteries are sealed AGM batteries that do not require the addition of water.

	Battery	Disconnect the inverter/charger prior to disconnecting the auxiliary battery.
	Generator	The Roadtrek is supplied with a DC generator located underneath the engine. Never submerge the generator. Use a spotter when launching a boat or crossing streams.
	Wastewater Storage and Dumping System	Close the gray water gate valve before using the wastewater system.
	Freezing	Under moderate subfreezing conditions, antifreeze is required in the exterior freshwater tank, toilet cassette and gray wastewater tank. Use RV antifreeze in accordance with the manufacturer's instructions.
	Electrical Servicing	This unit has a 12VDC, 110VAC and potentially 36-volt solar system. These systems need to be disconnected before working on them.

Before You Head Out

Your new Roadtrek is ready to go with just a little bit of preparation. To prepare for your first trip, you should:

- Read this manual.
- Contact your dealer with any questions.
- Plan your trip.

Then use this quick checklist:

- The day before your trip:
 - Charge your batteries by plugging in overnight.
 - Cool your refrigerator by turning it on.
 - Chill any beverages in your home refrigerator.
 - Fill your freshwater tank with clean tap water.
- The day of the trip:
 - Load the refrigerator with cold food (from your home refrigerator).

Coming Home

When you come home, there are a few maintenance tasks you should do to get your Roadtrek ready to go for next time. Refer to other sections in this manual for the procedures listed here.

- On your way home, dump the gray and black tanks at a convenient facility. See the HOWTO: Wastewater Dumping section for a concise description of the procedure to do this. Some RV parks and gas stations will let you dump for a fee, some city wastewater plants will let you dump for free but there is no real pattern, so local knowledge is vital in locating dump stations. The website <http://www.sanidumps.com> is a good resource. The maps for each state and province are

Especially helpful: <http://www.sanidumps.com/maps/help.php>

- At home, flush the water tank and fill it with fresh chlorinated water if you will be using it in the next few days. Otherwise, drain the tank. Don't let water you are planning to use sit in your tank for more than a week or so, and don't let any water sit in your tank for more than two weeks, whether you plan on using it or not. Over time, the chlorine goes away, and the microbes come out to play.
- To flush the tank, fill it using the fill port in the driver's side rear panel and open the freshwater tank drain under the tank at the rear of the Roadtrek.
- Plug in overnight to fully charge batteries.
- Turn off and clean out the refrigerator and prop the door open to let it air out.
- Turn off two important switches on your monitor panel to keep from draining your batteries:
 - The battery disconnect switch.
 - The inverter switch.
- If you turn everything off and you have solar panels, the panels will keep your AGM coach batteries topped up while your Roadtrek is parked.(non eco-trek version). If you don't have solar panels, it would be prudent to check your coach battery state of charge every month or so and charge them if necessary. If you don't turn everything off, even with solar panels, you will probably come back to dead batteries.

Interior Living Space

Cabinets

Your Roadtrek is equipped with cabinet latches which prevent the door from opening while the vehicle is in motion. The pushbuttons on the cabinet latches toggle from latched (button in) to openable (button out) by pressing the button. (Pictures 13.1, 13.2)

To open a cabinet, press the button to pop the latch, pull gently on the latch, and the cabinet door will open.

To close a cabinet, make sure the latch is still open (button out), then close the door. Once the cabinet door is closed, press the latch button in to lock the cabinet.



Do not attempt to close the cabinet doors while the latch button is pressed in. This will break the latch. Always make sure the button is out before attempting to close a cabinet door.



It is not recommended to keep large, round, and/or heavy objects in a cabinet unsecured as they may roll around and apply excessive pressure to the inside of the cabinet doors as you drive. The objects may shift position with vehicle motion and cause injury when the cabinets are opened. For this reason, Roadtrek Inc. recommends that you are aware of the objects that you store in overhead cabinets.

If you load a large amount of weight into a cabinet, experience large swings in temperature or humidity, ride on bumpy roads at high speeds frequently, or sometimes as part of normal wear and tear, the cabinet hinges may go out of adjustment. You will know the cabinet is out of adjustment when it will not open with the button out, or not latch with the button in.



Picture 13.1



Picture 13.2

Cabinets (Continued)



Picture 14.1

Apply moderate upward pressure and GENTLE outward pressure with both thumbs on the bottom corners of the door to open a stuck cabinet



Picture 14.2

Turn screw clockwise to lower cabinet face (if it won't latch), counterclockwise to raise it up (if it won't open)

To open a cabinet stuck shut with the button out, apply pressure UPWARD with your thumbs on both bottom corners of the cabinet door while simultaneously applying gentle pressure to open it, as shown above left. (Picture 14.1)



DO NOT FORCE THE DOOR OPEN BY PULLING OR PRYING ON IT - you will break the latch.

The screw in the top part of the hinge nearest the pivot point adjusts the vertical location of the door. Screw out to raise the door and fix stuck doors; screw in to lower the door and fix doors that won't stay shut when latched. (Picture 14.2)

Galley Cabinets

Immediately beneath the galley countertop there are drawers to the left and right of the food preparation surface to hold silverware and small cooking utensils. (Picture 15.1) The center panel in front of the sink is fixed and is not a drawer.



Picture 15.1

Galley cabinets, with propane cooktop

Lights

The oval ceiling lights are individually controlled and are turned on by tapping the lens of a given light. (Picture 15.2) NOTE: the battery disconnect switch must be on for any of these lights to work. These are LED lights, and consume very little electricity.



Picture 15.2

Tables

The tables (Pictures 17.2, 18.1) can be set up to use either the front or rear lounge areas for dining, computer, gaming, or other recreational use. The table leg is stored in the closet to the left of the galley, next to the water heater. (Picture 16.1) The leg keys into a T-nut fitting in the floor plate. (Picture 16.2) To install the table leg in the floor plate, unscrew the T-nut all the way on the end of the table leg and insert the T-nut into the key in the floor plate. (Picture 16.2) Rotate the table leg clockwise and it will tighten into place within a couple of turns. If it does not, unscrew the T-nut all the way and try again.



Do not force the T-nut. If it's set up right, it will lock in place with very little effort.

The tabletop is stored in the rear door. (Picture 18.2)



Picture 16.1

Table leg storage in wardrobe to right of galley



Picture 16.2

Table leg T-nut attachment



Picture 18.2

Tabletop storage in back door

Front Table Setup



The vehicle will not drive unless the front seats are locked and forward facing.



Picture 17.1

To rotate the front seats, lift on the front inside corner trim



Picture 17.2

Front lounge table

Rear Table Setup



Picture 18.1

Rear dining table



Picture 18.2

Tabletop storage in back door

Captain's Seats

The two captain's seats in the front of your Roadtrek are adjustable fore-and-aft by pulling up on the bar under the front of the seat and will swivel when the inside corner is pulled up. Always return the seats to the forward-facing position when driving. They will lock into this position and stay locked until the swivel tab is raised again.

To create a front lounge area, first ensure that the seats are fully upright by loosening the recline adjustment and bringing the backs of the seats forward. Do not attempt to pivot a reclined seat. Use the fore-and-aft adjustment while pivoting the seats to allow the sides of the chairs to clear the armrests on the vehicle doors, the engine cover, and other obstructions. Do not force the seats around. Swiveling the driver's seat may require you to loosen the tilt steering wheel adjustment and move the steering wheel as far forward and up as possible. Opening the front doors slightly will allow you to clear the door armrests easily.

Window Treatments

The nightshade curtain blocks airflow. (Picture 19.1) If you leave the window open, then close the nightshade, close all other windows, and then close the side door, it is possible for the curtain to get blown out of the track. Always close the window prior to closing the nightshade.

The window curtains slide to the right and left. The plastic clip is not a pull tab; it is a locking tab. Always pull on the aluminum bar. The curtains are configured so that the nightshade side covers the window opening for additional privacy.

The curtains on the sliding door and the rear door slide on tracks. It is best to use both hands, one near each track, to move the curtains. (Pictures 20.1, 20.2, 20.3)



Picture 19.1

The side window
screens – nightshade
side



Picture 19.2


Bugscreen side

Window Treatments (Continued)



Picture 20.1

Rear door curtain

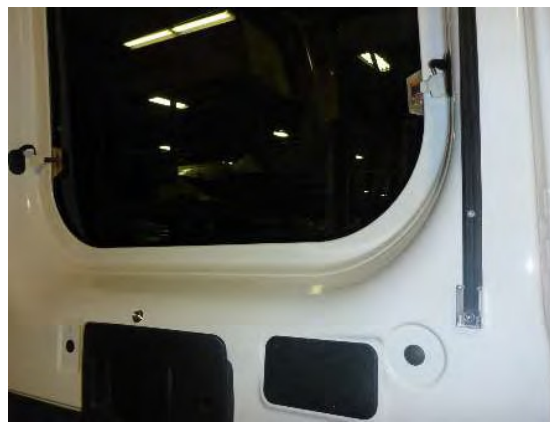

Picture 20.2

Rear door track



Picture 20.3

The side door curtain

Ventilation

Your Roadtrek is equipped with a ceiling mounted ventilation fan. (Picture 21.1)

The fan has a cover that must be raised by turning the large knurled knob or with remote. Raise the cover, then use the remote to the desired speed and temperature.

The fan also has a thermostat, which will allow you to set the temperature at which the fan comes on. If you want the fan to operate at all temperatures, turn the thermostat all the way toward the blue section of the dial.

There is also a fuse in the body of the fan, in addition to the fuse in the distribution panel. Check both this fuse and the one on the 12-volt fuse panel if your fan stops working.

For more details, please refer to the Fantastic Fan manual.



Turn the fan off and close the cover completely before driving. The cover will rattle and might be damaged by wind pressure if you drive with it open.



Open the windows and open the nightshade slightly to allow for airflow



Picture 21.1

Sleeping Facilities

Your Roadtrek has beds that can be configured as a king bed or twin bed. Experiment with different configurations to find what works best for you.

Side Facing Power Sofa

The switch to lower the sofa into the bed position is located on the passenger side in the rear next to the thermostat. (Picture 22.1)

The seatbelts for the power sofa are attached to the floor behind the power sofa. In order to use the power sofa as a seating position while driving, these seat belts must be threaded up through the gap between the seat back and bottom and used together with the shoulder belts to secure passengers in these seating positions.

To make the bed, start by pulling out the passenger side bed slide. Pull the cushion forward and allow the rear bolster to slip behind it. Now lower the power sofa. Push the seatbelts down through the sofa after you lower sofa. (Pictures 22.2, 23.1, 23.2, 23.3)



Picture 22.1

Power sofa switch



Picture 22.2

Full bed

Side Facing Power Sofa (Continued)



Picture 23.1

Passenger side bed slide
pull holes under cushion



Picture 23.2

Passenger side bed in place



Picture 23.3

Sofa lowered in place

Forward Facing Power Sofa (Picture 24.1)

To make the sofa into a twin bed, use the sofa switch to lower the sofa. (Picture 24.2) Remember to push the seatbelts through the sofa.



Picture 24.1

Forward facing sofa



Picture 24.2

The sofa in twin configuration



Picture 24.3

To make the king bed, lower the sofa, then retrieve the center board from under the driver's ottoman cushion



Picture 24.4

Move the ottoman cushions toward the center, and use the small backrest cushions to fill in the gaps and to hold the ottoman cushions in place



To make the sofa, remember to pull the seatbelts up through the sofa before raising it to a sitting position.

Bathroom Facilities

Door


The bathroom doors are secured by a pin which is attached to the right door. To secure the doors for driving, close the left door first, then the right door, and then push the pin down so that it engages behind the lip at the front of the bathroom floor. (Picture 25.1) Push gently on the top to secure the latch along the upper enclosure lip. This will prevent the doors from swinging open when the vehicle is in motion.



Always engage this pin before moving the vehicle, even for a short distance.

Using the Toilet

The enclosed bathroom in the Roadtrek contains a marine toilet. To flush the toilet, press the foot pedal located at the bottom of the front of the toilet bowl. (Picture 25.2)

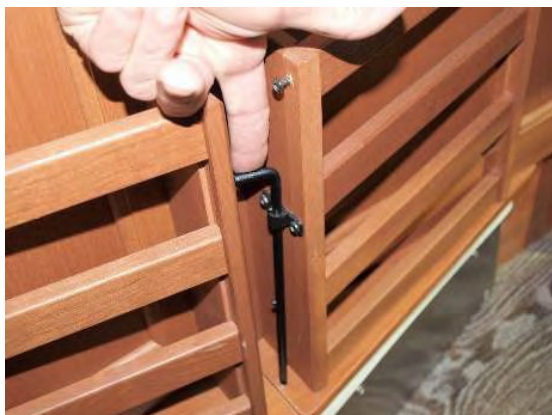

Picture 25.1

Bathroom door pin



Picture 25.2

Toilet flush pedal

Shower



Picture 26.1

Shower connection and knob



Picture 26.2

Shower drain



Picture 26.3

Shower curtain and light

To take a shower, unscrew the drain stopper in the center of the bathroom floor. (Picture 26.2) Release the hook and loop fastener straps retaining the shower curtain and slide the shower curtain along its track to enclose the shower space. (Picture 26.3) Pull the knob on the spout up and adjust the water temperature as desired. (Picture 26.1) There is a water cutoff on the shower nozzle to conserve water. When finished, either towel off or air dry the curtain before storing it. Refasten the drain stopper to prevent the contents of the gray water tanks from sloshing up into the shower area while driving and remove the shower hose from the sink connection. Push the knob back down to change the sink back into normal mode.

Outside Shower

The outside shower is located on the driver's side, towards the rear wheel. See Outside your Roadtrek for more details on location.

Appliances

TV and Home Theatre System

The TV and Blu-ray player are in the rear lounge area on the passenger side. Both the television and the Blu-ray player use 120-volt current, so the inverter, generator, or shore power must be on and available for them to work. They are supplied with remote controls.

Note: Some newer coaches may be equipped with a Smart TV and therefore you would not have the Blu-Ray player in your unit.

Antenna and Cable Connections

There are two antenna connections in the cabinet above the Blu-ray player. One is labeled for the antenna, the other for cable TV. Connect the cable to the appropriate jack. (Picture 27.1)



Picture 27.1

TV Antenna and Cable connections

Refrigerator

The refrigerator is an electric compressor model that runs on 12-volt DC power. When shore power is available, the inverter charger provides enough power to run the fridge without discharging the batteries.

The refrigerator temperature control is inside the unit, on the right side of the freezer compartment. (Picture 27.3) Please see the appliance manual for operation details.



Picture 27.2

Push on the latch to open fridge door



Picture 27.3

Thermostat is located inside on the rear wall



Do not block the vents at the top and bottom of the fridge. These vents must be unobstructed for the refrigerator to work properly.

Microwave Oven

The oven is a standard microwave oven. It operates much the same as the microwave at your house. It is probably lower powered, so cooking may take a bit longer.

The microwave will operate from the batteries through the inverter for reheating purposes or other brief use. However, for extended microwave use, you must be connected to shore power or have the optional generator running.

Propane Cooktop (Picture 28.1)

The propane cooktop needs fresh air for its safe operation. Make sure to open a window and turn on the overhead fan for proper ventilation. The igniters are powered by 12-volt coach battery power, so turn the battery disconnect switch on before using the propane cooktop. For detailed information on this appliance consult the cooktop Owner's manual. (Picture 28.2 an optional Induction Stove)



Picture 28.1

Propane cooktop



Picture 28.2

Optional Induction Stove

Hot Water

Your Roadtrek is equipped with a propane fired tankless water heater. The heater has no tank and operates on demand. At low flows water may be hot, while at high flows water may be cooler. This is normal. When you turn on the water heater you will not hear it fire up. It only ignites when it senses a water demand. The control is located on the inside wall of the cabinet. (Picture 29.2) Refer to your Girard water heater manual for details of operation.



Picture 29.2

Outside Your Roadtrek

Awning

Your Roadtrek has a roll up awning. (Picture 30.1) The awning is extended with a power switch located on the control panel. (Picture 30.2) The awning has two support struts that must be used to support the awning. (Picture 30.3) These are secured to the two attachment points on the side of the Roadtrek. Refer to the awning manual for the proper way of securing the awning supports to the attachments. To stow the awning, detach the supports, stow them in the awning housing, and retract the awning.



Awnings are susceptible to damage from wind, and for this reason should never be left extended when you are away from the vehicle. If a thunderstorm or other windy weather is imminent, stow your awning until the wind calms down.



Picture 30.1

Power awning



Picture 30.2

The awning power switch



Picture 30.3


Awning support

If the power to the vehicle is not available, the awning can be safely retracted using the manual override located on the idler (right) end of the case. (Picture 30.4)

This procedure cannot be used to extend the awning.

1. Remove the plug from the right end cap and save.
2. Insert a 3/8" socket drive extension and handle into the square drive hole inside the endcap.
3. Turn the handle clockwise until the awning is retracted.
4. Replace the plug.

After closing the awning with the manual override, the lead rail may move out from the case 1/4"-1/2". This is normal and the awning is secure for travel until the power is restored or repairs are completed. Do not attempt to force the lead rail in with the override, serious damage can occur to the awning.

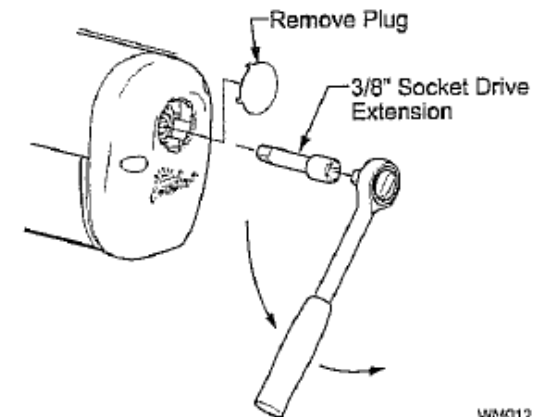

WM012

Exterior Shower

The outside shower hose attaches to the faucet inside the rearmost driver's side storage compartment, behind the rear wheel. This faucet provides hot and cold running water from the same sources as your inside faucets. When finished, disconnect and store the shower hose and nozzle.

Side Doorstep

Your Roadtrek is equipped with a step that automatically extends when the side door is opened for easy entry and exit out of your vehicle. With the step switch on, the step will extend once when the door is open and remain extended even if the door is closed. With the switch off, the step will extend and retract every time the door is opened and closed. (Picture 31.1, 31.2)



For safety reasons, the step will automatically retract when the ignition is turned on, even if the step switch is on. This is to prevent damage caused by driving with the step extended.



The driver's side and passenger's side doorsteps are not affected by this switch and will extend and retract every time the doors are opened.



Picture 31.1

Step switch



Picture 31.2

Step extended

Rear Door Screen

***Your Roadtrek may have come with one of the following screen packages. Please refer to the information that pertains to your specific coach.**

Version 1

Roadtrek's have an optional rear screen which allows you to open the rear doors and get fresh air and a better view, without bugs coming in or (attended) pets going out. (Picture 33.2) If you ordered this option, look for this screen in the white box that comes with your new Roadtrek. The screen attaches to the rear door frame and cargo area floor with a zipper and hook-and-loop fasteners. (Pictures 32.1, 32.2)



Picture 32.1
Surround with zipper



Picture 32.2
Hook and loop fastener for
bottom edge of screen

Open the screen and locate the edge with hook and loop material along it. This edge is the bottom, so use the hook-and-loop strips on the screen to attach it across the bottom of the door opening. It is important to note that the screen is NOT a cargo net and can be damaged if left installed while driving if objects are stored in the rear of the vehicle.

Start the zipper at each bottom corner by pushing the bottom stop (the metal end) of the zipper into the two back-to-back zipper sliders and zipping the top slider upward. (Picture 33.1)

At the top, close the flap with the hook-and-loop fastener strip where the zippers meet.

Use the double slider to unzip the bottom of the screen to allow access to the underbed storage area in the back of the Roadtrek without disturbing the top section. (Picture 33.3)

To remove and stow the screen, unzip it from the top down. Unzipping it from the bottom will not allow you to remove it from the doorframe surround.




Picture 33.1

Start the zipper on the left side



Picture 33.2

Installed screen

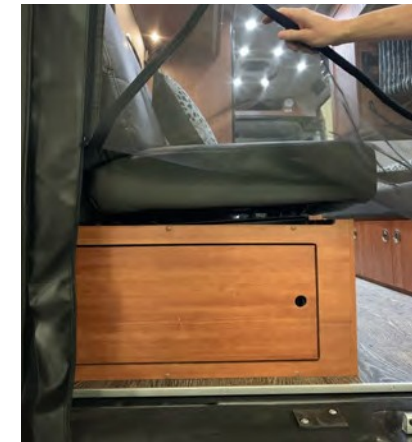

Picture 33.3

You can access the underbed storage
are without removing the screen

Rear Door Screen Version 2

Roadtrek's have a rear screen which allows you to open the rear doors to get fresh air and a better view, without bugs coming in or (attended) pets going out. The screen is attached to the rear door frame and cargo area floor. Along the bottom of the screen you can find three large pockets that can be used to store a range of different items. In addition to the bug screen, there is a built-in privacy blind that can be easily zipped up to provide full privacy.

Rear screen
with full
privacy



Rear screen
with bug
(and no-see-
ums) net



Rear screen
fully open




In addition to the rear door screen, there is also a side door screen which will allow you to keep the side door open for ventilation without admitting insects. The side door screen offers a bug (and no-see-ums) screen that comes equipped with a magnetic door catch that allows you to easily pass through the door without having to zip it open and closed. The screen can also be unzipped and rolled out of the way when not in use.

Side screen closed with
bug (and no-see-ums) net



Side screen showing
magnetic close

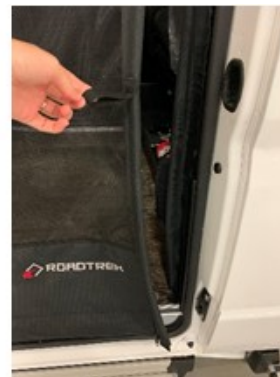

The side screen must be open when you close the door. The screen could be damaged if you shut the door while the screen is in place.

While sturdy enough to keep insects out, neither this screen nor the rear screen is designed to resist repeated and persistent attempts by pets to get out of the vehicle. Do not leave your pets unattended with the screen in place and the door open. They may take themselves for a walk.

Utilities

Just like your house, your Roadtrek has fresh water, electricity, wastewater disposal, heating, and cooling systems. In the Roadtrek, these systems are self-contained and travel with you.

Your vehicle should be reasonably level to allow normal operation of the system.

Fresh Water

Your freshwater tank uses a gravity fill system, located in the driver's side door pillar. You can fill the freshwater tanks from a convenient water spigot.

To fill the tanks with fresh water, open the driver's side front door and remove the orange plug in the freshwater fill port. (Picture 34.1) Fill until water comes out the hole.

City Water


The city water connection is in the rear, underneath the rear bumper on the passenger's side. (Picture 34.2) Unscrew the white plastic protective cap and connect your clean hose to the water faucet and this connection point. Turn the faucet on and check for leaks, tightening the connections as necessary.

There is a pressure regulator in the connection. See HOWTO: Potable Water Use for instructions on how to hook up to city water.



Picture 34.1

Fresh water tank fill

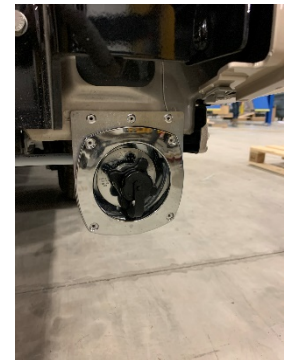

Picture 34.2

City water connection

Water Pump

To use the water in the tank, you need to turn on the water pump. (Picture 35.1)

Wastewater Gray

Tank

Galley sink, bathroom sink and shower drain water drains into the gray water tank. The shower and sink have traps to prevent tank odors from entering the living space. Be sure to replace the screw-in plug in the shower floor after use to prevent gray water from sloshing up into the shower pan from the gray water tank while driving.

Black Tank

The black water tank contains toilet waste. Please refer to the HOWTO: Wastewater Dumping section for an explanation of which materials you can and can't flush down the toilet.

Indicators

The gray and black water tank level indicators on the control panel will give you an approximate indicator of your tank levels. (Picture 35.2) When the gray water tank is full, water will no longer drain down the shower and sink drains, and you need to dump the tank before running any more water. If you see fluid below the toilet valve in the bowl of the toilet, your black water tank is full and needs to be emptied before further use.

See Monitor Panel for more information.



Ensure that both the black and grey water gate valves are closed before using the wastewater system. It is possible for the valves to open slightly especially after extensive driving. Black and grey water dump valves are accessed through the driver side storage door.



Picture 35.1

Water pump switch location
on monitor panel



Picture 35.2

Tank level and battery charge indicators
on monitor panel

Heating and Cooling

Thermostat

The thermostat controls the furnace and the air conditioner. Set the thermostat on "heat" or "cool" and set the desired temperature.

The third setting, "fan", recirculates cabin air using the fan inside the air conditioning unit. (Picture 36.1)

Air Conditioning

The air conditioner (AC) provides cooling for your Roadtrek using electric shore power or under hood generator. (Picture 36.3) The AC can be operated normally when you are plugged in to shore power.

- If your Roadtrek is parked on an incline, it is possible for condensate to leak into the living space. If this happens park in a more level location.

Propane Furnace

The furnace is controlled by the combination thermostat located above the rear bed. (Picture 36.2) The furnace requires propane and 12-volt power. The furnace can be used without shore power or generator use.

Keep the aisle in front of the furnace clear of any obstructions when using the furnace to allow air circulation. The furnace can operate when outside temperatures are below freezing.



Picture 36.1

Thermostat



Picture 36.2

Propane furnace



Roof-mount air conditioner

Electrical System

Coach Batteries

The coach batteries in your Roadtrek are sealed AGM batteries. Do not attempt to open them. There is no maintenance possible on these batteries.

Battery Disconnect Switch

The battery disconnect switch provides power to all 12-volt appliances, such as the water pump, the refrigerator, and so forth. This switch should be off when you are not using your Roadtrek, and on whenever you are driving or camping. The "Battery On" light next to it will indicate the position of the switch. (Picture 37.1)



Picture 37.1

Battery disconnect switch

Charging Your Batteries

Inverter Charger

Your Roadtrek is equipped with a 2000-watt inverter-charger which converts 120-volt AC (household current) to 12 volts DC when you are connected to shore power or running the optional gasoline generator. This 120-volt power is used to power your 12-volt DC appliances as well as charge your batteries. Whenever you are receiving either source of 120-volt power, you are charging your batteries.

Alternator Charger and Battery Separator

While driving, your Roadtrek will also charge the coach batteries from the vehicle alternator through a separator. The separator allows extra vehicle alternator-produced electricity to charge your coach batteries in addition to keeping your engine (chassis) battery charged. When the vehicle engine is not running, it breaks the electrical connection between your coach batteries and your engine battery, so your engine battery remains charged to start your engine even though you are using coach battery power while camped. This is all automatic - there are no user adjustments possible to the separator.

Optional Solar Panels

The optional solar panels will charge your batteries when enough sunlight is available. The solar charge controller (Picture 38.1) is installed at the factory for the type of panels and batteries installed on your vehicle, and Roadtrek strongly recommends that you make no adjustments or changes to the charge controller or its programming. If equipped with a display, the charge controller usually displays either system voltage or amperes generated by the panels.

On Board 120 Volt AC Power Standard 2000W Inverter

The standard configuration includes a 2000-watt inverter. (Picture 38.2) This inverter provides 120-volt AC (household current) for a few of the outlets in your Roadtrek; primarily the ones running the TV and the DVD player. It will run the microwave and the air conditioner.

The inverter is configured at the factory for the batteries and power sources in your Roadtrek. Please do not change any settings without consulting the factory.

Your refrigerator will run on either 12-volt battery power or 120-volt inverter power.

Optional Under hood Generator

Your Zion can be ordered with the under-hood generator. This generator operates transparently to you. There is no special maintenance or usage instructions to operate this generator; it runs whenever your vehicle engine is on.



Picture 38.1
Solar charge controller



Picture 38.2
Inverter switch

Shore Power

The shore power connection is through the shore power cord, stored in the driver's side large compartment. See Outside your Roadtrek for location. The switchover from shore power to inverter is automatic.

To connect to external (shore) power, open the side compartment and remove the power cord. Plug the power cord into the campsite 30-amp power source. See HOWTO: Shore Power for a concise guide on how to connect and disconnect to shore power.

Outlets

The outlets are operated from the inverter, generator, or shore power. Further, the outlets are protected by GFCI.

Several outlets have ground fault circuitry (GFCI) - the button is in the middle of the GFCI breaker in the main distribution panel, the GFCI pops out when they sense an anomaly or sometimes when the circuit undergoes transitional conditions. These outlets also protect other outlets in the Zion. If you are not getting power from an outlet, check and reset this button if needed. The outlet at the side door powers the TV and DVD player, so check it if your TV is not receiving power.

(Picture 39.1)



Picture 39.1

Outlet at side door

Monitor Panel

Location

The monitor panel is located inside the side door, above the doorframe, to the left of the galley. (Picture 40.1)

Power Sources

The monitor panel controls 2 separate power sources; the 12-volt DC and the 120-volt AC power via the inverter, shore power, or optional generator.

12 Volt DC Power

The power to the 12-volt DC outlets and appliances is controlled by the battery disconnect switch to the lower left.

On the bottom left is the battery disconnect switch, which supplies 12-volt battery power to the 12-volt light and other cabin appliances. This switch must be on for any of the 12-volt electrical devices to work. Remember to turn off two switches -

the inverter switch and the battery disconnect switch when your Roadtrek is not being used to avoid discharging the batteries.

The battery disconnect switch has a blue indicator light to the right of it to show you when the battery power is on. (Picture 40.3)



Picture 40.1

Monitor Panel



Picture 40.2

Inverter switch



Picture 40.3

Battery disconnect switch

Inverter

The inverter provides 120-volt AC (household current) to the 120 volt appliances and wall outlets. (Picture 40.2)

Shore Power

Shore power is the name for power supplied by a utility company that you plug into to provide power to your Roadtrek. See HOWTO: Shore Power for a concise guide to plugging in and unplugging from shore power.

Other Switches



Picture 41.1

Patio light switch



Picture 41.2

Zion awning switch

Patio Light

On the monitor panel, the top left switch is the patio light switch. (Picture 41.1) Press the top of the button to turn the lights on, and the bottom to turn them off. These are LED lights and use very little power.

Awning Switch

The awning switch is located to the right of the main panel. (Picture 41.2) Press the top to extend the awning and the bottom to retract the awning.

 Always check out the area and make sure that the awning will not extend into trees, bushes, or other obstructions.

Step Switch

The step switch locks the step in its extended position. (Picture 42.1) The step will always retract when the transmission is shifted into Drive unless the side door is open.

Water Pump Switch

The centered switch to the right of the leftmost four switches is the water pump switch. (Picture 42.2) It should be on only when you have water in the freshwater tanks and wish to use the sinks, showers, or toilet. The pump should not be run without water. As with the patio light switch, pressing the top of the button turns the pump on, and pressing the bottom turns it off.

Water Heater Switch

There is no water heat switch on the Zion. The water heater is mounted in the cabinet with the water heater, “instant on”, so it turns on when there is a demand for hot water.



Picture 42.1

Step switch



Picture 42.2

Water pump switch

Tank Charge Indicators

To the right of the switches are the indicator lights for the battery charge level, the freshwater tank level, and the black and gray water tank levels. (Picture 43.1) The battery disconnect switch must be on for this display to work. Press the button for each to see the display. These will give you an approximate reading, to the nearest third, of how much is in each tank. The four indicator lights for the battery are low, fair, good, and charging (AGM models only).



Picture 43.1

Tank indicators

Distribution Panel

The distribution panel is in the headliner above the driver's seat. The 120-volt AC breakers, GFCI and the 12-volt DC fuses are behind a black plastic cover on the right side.

AC Breaker

Flip the cover to the right and note the sticker under the cover with the identifying information on each breaker. (Picture 44.1) When storing the Roadtrek for the winter, turn off the battery disconnect switch, the inverter, and all circuit breakers in this panel.

12 Volt Fuse Panel

The 12-volt fuses are on the right side of the distribution panel with the labels for each fuse on the inside of the cover.



Picture 44.1

Breaker and fuse access

Alarms and Warnings

Propane and CO Monitor

Your vehicle has been equipped with a combination propane leak and carbon monoxide detection device for your protection. It is located slightly above floor level next to the furnace and below the fridge.

Be sure the detector is operating while using your vehicle. Do not block air circulation in the area where the propane leak detector is located. The detector runs on 12-volt power supplied by the coach batteries and is operational whenever the battery disconnect switch is on. For this reason, whenever the vehicle is occupied, particularly if you are asleep, the battery disconnect switch should be in the "on" position.



Coach power on the Monitor Panel must be on for detector operation. Make sure your battery disconnect switch is on.



Do not disable, unplug, or otherwise hinder the operation of this detector or the smoke detector.



The detector has a useful service life, beyond which it needs to be replaced. See Manufacturer's Owner's Manual for other operating instructions or look for the sticker which is placed on the detector to see the replacement date.



The detector will chirp if the coach batteries are running low.

Smoke Detector

The smoke detector is located to the left of the side door. It is powered by a 9-volt battery which needs periodic replacement.

Refer to the Owner's Manual for the smoke detector for replacement interval for the battery and for the detector itself.



Smoke alarm is shipped with battery reserved. Check battery installation if the smoke alarm does not work.

Fire Extinguisher

Your Roadtrek comes equipped with a dry chemical fire extinguisher suitable for all fires. (Picture 46.1) Before every trip, check to see that the needle on the dial is in the green range. If not, replace the fire extinguisher. DO NOT test your fire extinguisher by discharging it - total discharge time is 8 to 12 seconds, so it will become rapidly depleted if you test it this way. Service life on fire extinguishers currently supplied is 12 years; replace the fire extinguisher if it is more than 12 years past the year of manufacture stamped on the base of the cylinder.



Picture 46.1

Located at front passenger seat doorstep

Maintenance

Tires

See the automotive chassis manufacturer's owner's manual and documents for tire warranty information. Inflation pressure information is on the sticker inside the galley cabinet door. The current RAM ProMaster® manual recommends checking tire pressures regularly, at least every other week and before a long trip. Tire rotation intervals depend on wear and other factors, but tires should be rotated at least every maintenance interval, defined as every 40,000 km/24,000 miles. Follow the tire rotation pattern for dual rear wheel models in your ProMaster® owner's manual.

Cargo Carrying Capacity

See the information labels attached to the driver door post.

Owner Maintenance Checks

Listed below are vehicle maintenance checks and inspections that should be performed by the owner or qualified service technician at the indicated intervals. Any adverse conditions should be brought to the attention of your dealer or qualified service technician for expert service advice as soon as possible. The owner maintenance checks are generally not covered by warranties and you may be charged for labour, parts and supplies used.

When You Stop for Fuel or Weekly

- Check engine oil level.
- Look for low or underinflated tires.

Every Other Week

- Check tire pressure on all tires and your spare.

At Least Monthly

- Check coolant level in the coolant recovery reservoir.
- Check windshield washer fluid, brake fluid and power steering fluid levels.
- Check operation of all exterior lamps, including brake lamps, turn signals and hazard warning flashers.

At Least Every Three Months

- Flush water to the toilet. Use a hose or bucket to fill the tank through the toilet and dump. Flush gray water holding tank. Use a hose or bucket to fill the tank through the galley sink and dump.
- Flush and sanitize freshwater tank. To flush the tank:
 - Fill it completely using the city fill and drain using the freshwater tank drain underneath the tank.
 - Sanitize by adding 1/2 cup chlorine bleach to the tank, fill with water, let sit for at least two hours, and drain. 1/2 cup vinegar added to the next tankful, which will also be drained before filling with fresh water for use, will help dissipate the chlorine smell
- At Every oil change have the GU belt inspected for Wear, alignment and clearance to hoses.

Refer to other sections in this manual for drain and fill locations.

At Least Twice a Year

- Check windshield wiper operation.
 - Clean wiper blades with clean cloth dampened with washer fluid.
 - Wiper blades should be replaced at least once a year.
- Check radiator, heater and air-conditioning hoses for leaks or damage.
- Check for worn tires and loose wheel lug nuts.
- Check parking brake system and put the brake on and see if it will hold on a moderate hill. If not, get it repaired.
- Check head lamp alignment.
 - Shine your low beam headlights on a wall. The light patterns should be the same height. Measure headlight height at the vehicle with a yardstick and the light patterns should be the almost same height or slightly less with your vehicle level. If not, get the headlights aligned.
- Check lap and shoulder belts for wear and function. Replace any belts with frayed spots or that do not smoothly retract into their holders.
- Inspect appliance vents to ensure they are free from dirt, insects, spider webs and/or nests.
- Inspect gray water tank vent and remove any debris or other obstructions. The gray water tank vent is on the roof, passenger side and in the bathroom area.
- Clean air conditioner filter. See air conditioner manual for details.
- Thoroughly clean and wax the roof of the van.
 - To wash the solar panel, use a garden hose to rinse dirt off the panel.
 - Do not scrub it with a brush or otherwise apply any abrasive material to the solar panel surface.
 - Rinsing the panel two or three times a year to remove excess dirt is all you need to do to keep the panel operating at full output.
- With the tank empty, add one cup of mineral oil and one cup of hot water to the gray tank and black tank.

At Least Once a Year

- Lubricate all door hinges, locks and latches, especially the exposed hinges on exterior doors. These will freeze up and cause damage to the doors if neglected.
- Have appliances tested and cleaned.
- Wax and polish and protect exterior surfaces. The wheels are coated aluminum and there is no bare aluminum on the vehicle, so do not use aluminum polish on any surface of your Roadtrek.

To prevent water from entering your vehicle, avoid spraying water directly into exterior vents or grills. Do not use a power washer to clean your Roadtrek because damage to the paint, removal of decals and water leaks will result. Hand washing or commercial car washes accommodating large vehicles are the best way to keep your Roadtrek clean and shiny.

Other Maintenance Checks

Follow the maintenance for your appliances as per the appliance's manufacturer's manual.

Tire Service Kit

- Small punctures up to 1/4 inch (6 mm) in the tire tread can be sealed with Tire Service Kit. Foreign objects (e.g., screws or nails) should not be removed from the tire. Tire Service Kit can be used in outside temperatures down to approximately -4°F (-20°C). This kit will provide a temporary tire seal, allowing you to drive your vehicle up to 100 miles (160 km) with a maximum speed of 50 mph (80 km/h). The tire service kit is located under the passenger seat. Full instructions for the use of the kit can be found on page 206 of your RAM ProMaster® Owner's manual.



You can also use the tire service kit pump to inflate balls, air mattresses and other inflatables. You will find adapters in a compartment on the bottom of the unit.

Roadtrek Inc. Two (2)-year limited Warranty

Roadtrek Inc. warrants to the Purchaser that the Motorhome is free from defects in material and workmanship on the portion manufactured by Roadtrek Inc., under normal use and service, for two (2) years, from date of purchase by the first Purchaser or the date the Motorhome was first put into service (for example, as a demo or rental), whichever is earlier.

This non-transferable warranty shall be fulfilled at a Roadtrek Inc. Dealer or authorized Roadtrek Inc. repair facility. For in transit emergency repairs, you may choose to deal with a non-authorized RV service facility. However, all warranty repairs at non-authorized RV service facilities must be preauthorized by Roadtrek Inc. Roadtrek Inc. will, at its option, replace or repair free of charge (including related labor) any defective part, about which the Purchaser shall notify their Roadtrek Dealer within the warranty period. The obligation of Roadtrek Inc. under this warranty is expressly limited to such replacement or repair.

The provisions of this limited warranty shall not apply to the following:

1. Accident.
2. Unauthorized repairs or alterations.
3. Routine maintenance including, without limitation, caulking, re-caulking and waxing of the body of the motorhome, tightening screws, latches, locks, combustion systems, changing fuses, or light bulbs, and maintaining the air conditioning and heating systems.
4. Wheel alignment are not covered by warranty as the vehicle is built to chassis specs. Loading of the vehicle may have an impact on alignment.
5. Changes made to other units manufactured after this Motorhome was manufactured. (This is not an engineer upgrade warranty.)
6. Incidental damages connected with the failure of the Motorhome such as lost time, inconvenience, loss of use of the Motorhome, cost of rental cars, gasoline, telephone, travel or lodging.
7. Damages caused by environmental factors including, but not limited to, hailstorms, tornadoes, sandstorms, stone chips, lightning, floods, earthquakes, airborne fallout, chemicals, tree sap, ocean spray, road hazards.
8. Damage or loss caused in whole or in part by the misuse, abuse, neglect, theft, vandalism, product modification, improper customer or dealer installation, improper stowing of equipment, overloading or improper balancing of the load, low or high voltage, unauthorized repair or failure to follow instructions supplied with the recreational vehicle.
9. Motorhome that has been declared a total loss by an insurance company (demolished) or a Motorhome whose title indicates that it is designated as "salvage", "junk", or "rebuilt" or words of similar impact.
10. There will be no allowance for emergency road repair, towing, labor, meals accommodations, etc. Such will not be accepted if claimed under warranty.
11. Aluminum wheels are not warranted against corrosion or damage that is a result of road salt, sea salt, cleaning chemicals or harsh driving conditions and excessive pressure from power washers.
12. Rust or corrosion due to the environment, or any broken glass damage.
13. Materials damaged using harsh chemicals or abrasive cleaners.

The provisions of this limited warranty shall not apply to deterioration due to wear and exposure beyond the following limitations:

1. For ninety (90) days after the "Quality Care" Pre-Delivery Report is completed by the dealer for appliance adjustments, door latch adjustments, light bulbs, fuses, battery in the smoke detector, window and door screens. After 90 days these items are considered part of normal maintenance.

Roadtrek Inc. Limited Motorhome Warranty is void unless the following conditions are adhered to:

1. Warranty registration on the Motorhome must be completed by the Dealer and submitted to Roadtrek Inc. within 48 hours of date of retail delivery. When warranty applications are made and Warranty Card is not on file at Roadtrek Inc., reimbursement of claim will be delayed until proof of original purchase is submitted to Roadtrek Inc. Chassis warranty is activated by this process and may be impacted by any delays.
2. Warranty claims and authorization requests must be submitted to Roadtrek Inc. Including the last 8 digits of the Vehicle Identification Number (V.I.N.) and odometer reading. All claims must be submitted within 30 days of the date of repair.
3. Warranty work that will exceed \$200 must first be authorized by Roadtrek Inc. before proceeding with such work. The authorization number issued by Roadtrek Inc. must be noted on the warranty claim. See item #2 above.
4. Roadtrek Inc. reserves the right to inspect or request photographic evidence of defective parts that have been replaced under warranty. Dealer is expected to hold selected parts for a period of not to exceed 60 days. (See below).
5. Only parts and accessories and other material, available through Roadtrek Inc. and Authorized suppliers are to be used in the performance of warranty service. Express shipping costs are not covered by this warranty policy.
6. Warranty repairs performed a second time by a Dealer (due to incorrect or inadequate diagnosis, improper assembly or repair, or lack of proper testing when the original warranty repair was performed) are considered as shop comebacks and are not reimbursable. Costs of such repairs must be adsorbed by the dealer.
7. Purchasers are responsible for presenting their motorhome to a Roadtrek Dealer as soon as problem exists. The warranty repairs should be completed in a reasonable amount of time from date of authorization. Damage caused by failure to address warranty issues in a timely fashion will not be covered by this warranty, additional expenses will be the responsibility of the owner.
8. This limited warranty is expressly in lieu of any other expressed or implied warranty, including any implied warranty of merchantability or fitness for a particular purpose and of any other obligations or liabilities on Roadtrek Inc. which neither assumes nor authorizes any other person to assume for it any other liability in connection with motorhome manufactured by it.

Appliance Warranty

The following are not warranted by Roadtrek Inc., but are covered by individual warranties offered by their respective manufacturers to which terms both Purchaser and Dealer must comply:

- Antenna
- Awning
- Aluminum Rims
- Air conditioner
- Electrical inverter/charger/Separator
- Electronic equipment (TV, DVD player, Blue ray etc.)
- Engine Generator and Voltage regulator
- Furnace or other heating system
- Insta-hot
- Microwave oven
- Power Sofa
- Power steps
- Power roof vents
- Propane regulators

- Refrigerator
- Stove
- Toilet
- Volt start
- Valves (Black and Gray Tanks)
- Water pump
- Macerator
- Water heater
- Smoke alarm/Carbon monoxide detector
- Eco-trek modules

AGM Battery Warranty

Batteries are warranted by the battery manufacturer for one year from the "In Service Date" of the Roadtrek.

Warranty is voided if AGM batteries are tampered with, topped off with distilled water or allowed to sulfate or freeze due to lack of charge.

Diesel Particle Filter Warranty

For diesel vehicles equipped with the under-hood generator (GU Option) Roadtrek Inc. will warranty the performance of the Diesel Particle Filter for 2 years.

Contact Roadtrek directly for servicing instructions.

Warranty Intent

The intent of this extended warranty is to ensure the new owner of a Roadtrek that it is worry free from manufacturer caused defects (excluding the chassis) for the first Two (2) years of use.

DEFECTS Vs. DAMAGE

Please note the distinction between "Defect" and "Damage". "Defect" means the failure of the workmanship performed and/or materials used to conform with the design and manufacturing specifications and tolerances of Roadtrek Inc. Defects are covered because Roadtrek Inc. is responsible; on the other hand, Roadtrek Inc. has no control over "damage" caused by such things as collision, misuse, or lack of maintenance that occurs after the RV is delivered to the owner. Therefore, "Damage" for any reason which occurs after the motorhome is delivered is not covered under this warranty. Maintenance services are also excluded from the warranty because it is the owner's responsibility to maintain the Motorhome.

Obtaining Service

When your Roadtrek needs service, determine if the issue is with the Roadtrek upfits or the RAM ProMaster® chassis.

For Roadtrek upfits, contact your dealer. Start with the service writer, then the service manager and finally, if you are unable to resolve your issues with the service department, contact the dealership managing partner or owner. Please keep notes of who you spoke with and dates.

For chassis-related issues, contact Dodge service. Advise the service writer that you have a RAM ProMaster®, rather than a motorhome. Some dealerships do not want to work on motorhomes, but most can service a 3/4-ton van. Again, start with the service writer, then the service manager and finally, if you are unable to resolve your issues with the service department, contact the dealership managing partner or owner. If you cannot resolve your chassis related issues at the dealer level, contact Dodge factory service.



Roadtrek Inc. typically cannot initiate a case with the chassis manufacturer, the owner must do that.

Contact Roadtrek Inc. Service after you have exhausted the process above. Please provide as complete a record as you can so that your effort is not duplicated.

Roadtrek Inc. Service information:

retailsupport@roadtrekinc.com

Specifications

For general chassis specifications, please refer to the RAM ProMaster® manual. For specifications relating to your vehicle, including occupancy, weight rating, tire size, inflation and so on refer to the sticker on the driver's side B pillar (right side of the door frame, near the latch). For specifications relating to the baseline Roadtrek upfits, please visit our website at www.roadtrek.com Options and upgrades may change specifications.

Roadtrek Warranty Service

How to Get Service

To obtain warranty service for your Roadtrek, call toll free 888-663-0066. Our customer care specialist can help answer questions regarding our products and services, provide information about warranty coverage and maintenance issues, help you arrange for service under other manufacturer warranties, and locate a Roadtrek authorized dealers and service centers in your area. To find a current list of Roadtrek authorized dealers and service centers on-line, go to <http://www.roadtrek.com/locators/>. When you call, please have the following information available so that we may expedite your service:

- ▶ The chassis' VIN (Vehicle Identification Number)
- ▶ First retail owner's date of purchase
- ▶ The current actual mileage

NO WARRANTY CLAIM WILL BE PROCESSED OR PAID WITHOUT PROOF OF ACTUAL MILEAGE AND FIRST RETAIL OWNER'S DATE OF PURCHASE.

Roadside Assistance Plan

You are enrolled in a 24/7 roadside assistance plan for the first 2 years of the limited warranty upon registration of your Roadtrek. The roadside assistance plan is transferrable to subsequent owners within the 2-year coverage period. If your motorhome is disabled because of any nonconformity covered by this limited warranty or in certain other situations, our roadside assistance provider will assist by providing the following services: towing, mobile mechanic (where available), fuel delivery, tire change, battery jumpstart, lockout service and emergency fluids. To obtain roadside assistance, call 877-579-7078.

PLEASE NOTE THAT THE ROADSIDE ASSISTANCE IS ONLY AVAILABLE TO THE FIRST RETAIL OWNER AND IS NON-TRANSFERRABLE TO ANY SUBSEQUENT OWNERS.

Aftermarket Disclaimer

The compatibility of aftermarket systems and components should be researched thoroughly either with the dealer or manufacture as they may interfere with the performance of Roadtrek Inc. recreation vehicle systems and components, further affecting the warranty of the vehicle as designed.

Regulatory Notices

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration, (NHTSA) in addition to notifying Roadtrek Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, and/or Roadtrek Inc.

To contact NHTSA, you may call the Auto Safety Hotline toll-free at 1-888-327-4236, (or 366-0123 in Washington, DC area) or write to:

NHTSA
U.S. Department of Transportation Washington, DC 20590

You can also obtain other information about motor vehicle safety from the NHTSA Hotline.

HOWTOs

For access to more information on how to reform general functionalities of your Roadtrek, please go to:

<https://www.roadtrek.com/owners/#section-howto&FAQ>