

How To Guide

2016 CS Adventurous



HOW TO: Cable and TV Reception

Your Roadtrek comes with a home theatre system. This consists of a TV, a DVD player, the speaker system and the radio in the dash, along with a rooftop TV antenna and a cable TV connection.

The TV and home theatre system are located in the rear on the passenger side. The Cable TV/Antenna switch and power injector for the built-in antenna are in the cabinet just above the DVD player.

The TV and the home theatre system must be on to use the system. Both the television and the DVD player use 120 volt current, so the inverter, generator, or shore power must be used. Refer to the Electrical System for instructions on 120 volt AC power.

The TV and DVD are supplied with remote controls.

The home theatre system has inputs for media devices. Read the Owner's manual for full details.



TV Bracket release



DVD player

The TV is stowed against the wall on a hinged bracket. The bracket is secured with a large thumbscrew. Turn the thumbscrew horizontally to release the bracket and vertically to secure the bracket to the wall.

Once released, you can swing the TV to a comfortable viewing position.



Always stow the TV with the bracket secured to the wall for travel.



TV antenna switch and power injector



Rear speaker switch



Antenna/cable switch (small white button on cover)

Over-the-air TV

To watch TV using the Roadtrek rooftop antenna:

- Have 120 volt AC power available (inverter on OR shore power plugged in OR generator running)
- Turn on TV and home theatre system
- Set the speaker selector to "SURROUND"
- Set the antenna/cable TV switch to Antenna by pressing the button

DVD

To watch a DVD:

- Have 120 volt AC power available (inverter on OR shore power plugged in OR generator running)
- Turn on TV and home theatre system
- Set the speaker selector to "SURROUND"
- Use the DVD remote control to start the movie

Cable TV

To connect your Roadtrek to cable TV at a campsite or even in your driveway, first locate the Roadtrek's cable TV connection. It is behind the middle utility bay door on the bottom of the driver's side of the vehicle, just to the right of the waste water hose and handles, and has a square gray plastic cover about 3 cm on each side which is hinged at the side, which opens to expose the barrel connector the cable hooks to.



Cable TV connection location



Coaxial TV connecting wire with screw-on end



TV cable connected

You need a length of coaxial TV cable to reach from the cable TV outlet to your Roadtrek's connection point. These are sold in electronic supply and camping supply stores and come in lengths of 25, 50, and 100 feet. The cable is typically sold as RG-59U or RG-6 with F-type connectors. The RG-6 is preferable but either will work.

Screw the cable onto the barrel connectors at each end.

Push the white button on the panel in the cabinet above the TV to switch between cable and antenna.

Speaker Switch

The speaker switch is located in the same cabinet as the Cable/Antenna switch. You can select Surround, Off, or Automotive.

In the Surround position, the rear speakers (the speakers above the bed) will work with the TV/home theatre system. In the Off position the speakers are off. In the Automotive position, the speakers are connected to the dash radio.



Rear speaker switch