

Owner's Manual

2017 210 Popular



Contents

Introduction to Your 210 Popular	7
Disclaimer	7
Copyright	7
References.....	8
Do's and Don'ts	8
Symbol Legend	8
Regulatory Warnings	8
Information, Cautions and Warnings.....	9
Before You Head Out.....	11
Coming Home.....	11
Interior Living Space	13
Cabinets	13
Galley Cabinets	14
Lights	15
Tables	16
Front Table.....	17
Rear Table.....	18
Front Captain's Seats	19
Second Row Seat	20
Ventilation	21
Window Treatments	21
Front Window Treatments	23

Sleeping Facilities.....	24
Power Sofa	24
Twin Beds.....	26
King Bed	26
Optional Folding Mattress for Front Seat Bed	26
Bathroom Facilities	27
Enclosed Bath.....	27
Door.....	27
Toilet.....	27
Shower	27
Exhaust Fan	29
Outside Shower	29
Appliances	30
TV and Home Theatre System	30
Antenna and Cable Connections	31
Controlling the Rear Speakers.....	31
Hot Water	32
Refrigerator	32
Oven.....	32
Stove	32
Outside Your Roadtrek.....	33
Awning	33
Exterior Access Doors	34
Battery Access Door	34
Driver's Side Doors	34

Propane Access Panel	35
Exterior Shower.....	35
Optional Rear Door Screen	36
Optional Side Door Screen	37
Utilities	38
Fresh Water	38
Standard Edition.....	38
City Water	40
Summer and Winter modes	40
Summer Use.....	40
Winter Use	40
Anniversary Edition Fresh Water System	41
Water Pump.....	41
Waste Water	41
Gray Tank	41
Black Tank.....	41
Indicators	41
Propane System.....	42
Heating and Cooling	44
Thermostat	44
Heat Pump	44
Furnace.....	45
Electric System.....	46
Coach Batteries.....	46
Battery Disconnect Switch	46

Charging your batteries	47
Inverter-Charger	47
Standard Alternator Charger and Battery Isolator	47
Optional Engine Generator	47
Optional Solar Panels	48
On Board 120 Volt AC Power	49
Standard 750 Watt Inverter	49
Optional 2500 Watt Inverter	49
Optional Gasoline Generator	50
Shore Power	50
Outlets	51
Monitor Panel	52
Power Sources	52
12 Volt DC Power	52
Inverter	53
Shore Power	53
Other Switches	53
Patio Light	53
Water Pump Switch	54
Water Heater Switch	54
Tank and charge indicators	55
Optional Generator Switch and Hour Meter	55
Distribution Panel	56
AC Breaker Panel	56
12 Volt Fuse Panel	56

Alarms and Warnings.....	57
CO Monitor	57
Smoke Detector	57
Fire Extinguisher	57
Maintenance	58
Tires	58
Occupant Cargo Carrying Capacity (OCCC)	58
Owner Maintenance Checks	58
When You Stop for Fuel, or Weekly	59
Every Other Week	59
At Least Monthly.....	59
At Least Every Three Months.....	59
At Least Twice a Year.....	59
At Least Once a Year	60
Other Maintenance Checks	60
Spare Tire Storage	61
Obtaining Service	63
Specifications	64
Warranty.....	65
Industry Leading – Six Year Transferable RV Warranty	65
Chassis Manufacturer Warranty.....	65
Appliance Warranty	65
AGM Battery	65
Registration	65
Regulatory Notices	67

Introduction to Your 210 Popular

Congratulations on the purchase of your Roadtrek and welcome to the Erwin Hymer Group NA family. The information included in this manual is meant to help and guide you through the use of your vehicle so that you know how to properly use the many functions your 210 Popular has to offer.

Please keep this manual in your vehicle as a reference for when you are travelling. If you have any questions or comments on information found in this document, please contact us at manuals@erwinhymergroupna.com.

Disclaimer

This owner's manual was created to help owners with general use, maintenance and care of their RV. Erwin Hymer Group NA conducts ongoing product development and uses photos from multiple brands and vehicles to create these instructions. The included images may not reflect exact makes and/or models however, the information remains relevant and useful. These instructions are provided as general guidelines only, as certain add-ons or customization to an RV may change the manner these operations are performed.

Copyright



Erwin Hymer Group North America, Inc. (hereby known as Erwin Hymer Group NA) reserves the right to make changes at any time, without notice in colours, materials, equipment, specifications and models. The information contained in this manual is intended as a guide only, as continuous improvements are ongoing. Please visit <http://www.gohymer.com/owners-manual/> the most up to date manuals available. Some motorhomes may be shown with equipment that is optional. Accessories shown in any photographs may not be included.

This manual is released under a Creative Commons Attribution-Non Commercial-No Derivatives 4.0 International License [1].

In summary, you may:

- Copy any portion of this manual in any form for personal use;
- Distribute this manual complete with all of its original unmodified content;
- Modify this manual for your own personal, non-commercial use. You may not:
- Use this manual for any commercial use whatsoever;
- Modify this manual except as provided for in the full license and then distribute the resulting work;
- Charge for this manual other than reasonable media and shipping costs.

All images used in this manual remain the property of Erwin Hymer Group NA. They are for illustrative purposes only and may or may not be representative of the upfits in your Hymer. Contact Erwin Hymer Group NA for alternate licensing arrangements if you want to use or distribute this manual commercially.

References

[1] <http://creativecommons.org/licenses/by-nc-nd/4.0/>

Do's and Don'ts

Symbol Legend



Information: Useful information and knowledge.



Warning: Not following this instruction may lead to negative results.



Caution: You should follow this instruction.



Danger: Do NOT perform this action. Doing so may result in injury, severe damage, or death.

Regulatory Warnings

LEVEL	ITEM	INSTRUCTION
	Danger	Do not place propane cylinders inside the vehicle. - Propane cylinders are equipped with safety devices that relieve excessive pressure by discharging propane to the atmosphere. - Propane gas is highly flammable. This action can lead to fire or explosion and result in death or serious injury.
	Warning	Do not use gas cooking appliances for comfort heating. Can lead to carbon monoxide poisoning, which can lead to death or serious injury.
	Warning	Gas cooking appliances need fresh air for safe operation. - Open vents or windows slightly or turn on exhaust fan prior to using cooking appliance. - Gas flames consume oxygen, which should be replaced to ensure proper operation. - Improper use can result in death or serious injury.
	Warning	Do not fill propane containers to more than 80% of their capacity. - A properly filled container contains approximately 80 percent of its volume as liquid propane. - Overfilling propane container(s) can result in uncontrolled propane flow, which could lead to a fire or explosion and result in death or serious injury.

	Danger	If you smell propane: 1. Extinguish any open flames and all smoking materials. 2. Shut off propane supply at the container valve(s) or propane supply connection. 3. Do not touch electrical switches. 4. Open doors and other ventilating openings. 5. Leave the area until the odor clears. 6. Have the propane system checked and leakage source corrected before using again. 7. Ignition of flammable vapors could lead to a fire or explosion and result in death or serious injury.
	Danger	Vehicles and equipment powered by internal combustion engines and placed in recreational vehicles can cause carbon monoxide poisoning or asphyxiation, which could result in death or serious injury. • Do not store, transport, or dispense fuel inside this vehicle.

Information, Cautions and Warnings

LEVEL	ITEM	COMMENT
	Seat Belts	Use only forward facing seats equipped with factory installed seat belts while the vehicle is in motion. All passengers must be seated in these seats only, with the seat belts fastened while the vehicle is in motion.
	TV	Turn the TV off and stow it while the vehicle is in motion.
	TV	The flat screen TV should not be stored inside the E-Trek in cold temperatures. Remove it to reduce the chance of damage from the cold. Check the Owner's Manual for the TV for storage and operating temperatures.
	TV	To remove the TV, release the bracket on the back of the TV mounting bracket and remove the RCA cables, power supply cable and antenna cable.
	Propane	Do not store propane tanks inside your vehicle. Propane tanks are equipped with safety devices which relieve excessive pressure by discharging gas to the atmosphere.
	Propane	Do not refuel the propane tank to more than 80% of its capacity.
	Propane	The propane tank valve must be closed and all pilot lights, appliances and their igniters must be turned off during refueling of the motor fuel tank and/or the propane fuel tank. Only qualified personnel should refuel your propane tank.
	Propane	Purchase propane from a reputable propane facility. Contaminated propane is a common cause of system failure and is not covered under any warranty.
	Propane	The BBQ quick disconnect is regulated to 10 P.S.I. Please ensure that all devices connected to this are either rated for high "pressure" or have their own regulator. Many grills sold in the United States are "low pressure" (1/2 P.S.I.) and will require an additional regulator to step the pressure down to a useable level. If hooked directly to the BBQ quick disconnect they will be a severe fire hazard.

	Propane Leak Detector	Do not block the air circulation in the area where the Propane Leak Detector is located.
	Propane Leak Detector	Battery disconnect switch must be in the "ON" position for the propane detector to function.
	Flammable Liquids and Gasses	Do not store gasoline or other flammable liquids inside your vehicle.
	Heating	Never use cooking appliances or unvented propane heaters for space heating purposes. They need fresh air for safe operation.
	Heating	The heating furnace provides its own outside combustion air and exhausts to the outside.
	Heating	Portable fuel burning equipment, including wood, charcoal, and liquid fuel grills and stoves, should not be used inside your vehicle. Use of this type of equipment inside your vehicle may cause a fire or asphyxiation.
	Carbon Monoxide Leak Detector	Do not block the air circulation in the area where the Carbon Monoxide Leak Detector is located.
	Carbon Monoxide Leak Detector	Battery disconnect switch must be in the "ON" position for the Carbon Monoxide Leak Detector to function.
	110 V Electrical Servicing	Prior to servicing any 110 V, unplug the output lead from the power inverter.
	Exterior Access Doors	Ensure the shore power cord and city water supply lines are disconnected and in their stored positions before the vehicle is put in motion.
	Awning	Close the sliding side door prior to opening or closing the awning.
	Dining Table	When storing the dining table, secure in place using the snap-on strap.
	Extra Counter Space	Make sure the stove is off and has cooled prior to lowering the stove cover.
	Battery	Battery acid can burn your skin and damage clothing. Protective eye wear and gloves should be worn while handling batteries. Effective June 2010 all Erwin Hymer Group NA installed batteries are sealed AGM batteries that do not require the addition of water.
	Battery	Disconnect the inverter/charger prior to disconnecting the auxiliary battery.
	Generator	The E-Trek is supplied with an AC generator located underneath the engine. Never submerge the generator. Use a spotter when launching a boat or crossing streams.
	Waste Water Storage and Dumping System	Close the gray water gate valve before using the waste water system.
	Freezing	Under moderate subfreezing conditions, antifreeze is required in the exterior fresh water tank, toilet cassette and gray waste water tank. Use RV antifreeze in accordance with the manufacturer's instructions.

	Electrical Servicing	This unit has a 12VDC, 110VAC and potentially 36 volt solar system. These systems need to be disconnected before working on them.
---	----------------------	---

Before You Head Out

Your new 210 Popular is ready to go with just a little bit of preparation. To prepare for your first trip, you should:

- Read this manual.
- Contact your dealer with any questions.
- Plan your trip.

Then use this quick checklist:

- The day before your trip:
 - Charge your batteries by plugging in overnight.
 - Cool your refrigerator by turning it on.
 - Chill any beverages in your home refrigerator.
 - Fill your fresh water tank with clean tap water.
- The day of the trip:
 - Load the refrigerator with cold food (from your home refrigerator).

Coming Home

When you come home, there are a few maintenance tasks you should do to get your 210 Popular ready to go for next time. Refer to other sections in this manual for the procedures listed here.

- On your way home, dump the gray tank and toilet cassette at a convenient facility. See the HOWTO: Waste Water Dumping section for a concise description of the procedure to do this. Some RV parks and gas stations will let you dump for a fee, some city wastewater plants will let you dump for free but there is no real pattern, so local knowledge is vital in locating dump stations. The website <http://www.sanidumps.com> is a good resource. The maps for each state and province are

Especially helpful: <http://www.sanidumps.com/maps/help.php>

- At home, flush the water tank and fill it with fresh chlorinated water if you will be using it in the next few days. Otherwise, drain the tank. Don't let water you are planning to use sit in your tank for more than a week or so, and don't let any water sit in your tank for more than two weeks, whether you plan on using it or not. Over time, the chlorine goes away and the microbes come out to play.

- To flush the tank, fill it using the fill port in the driver's side rear panel and open the fresh water tank drain under the tank at the rear of the Roadtrek.
- Plug in overnight to fully charge batteries.
- Turn off and clean out the refrigerator and prop the door open to let it air out.
- Turn off two important switches on your monitor panel to keep from draining your batteries:
 - The battery disconnect switch.
 - The inverter switch.
- If you turn everything off and you have solar panels, the panels will keep your coach batteries topped up while your Roadtrek is parked. If you don't have solar panels, it would be prudent to check your coach battery state of charge every month or so and charge them if necessary. If you don't turn everything off, even with solar panels, you will probably come back to dead batteries.

Interior Living Space

Cabinets

Cabinet latches in your Roadtrek are different from the ones in your home and more like those on boats - they have to stay closed when the vehicle is in motion. The cabinet doors are secured with latches located along the edge of the cabinet door. Run your fingers along the edge and you will find the latch. Press the latch in and open the door.

To close a cabinet door, shut it gently until you hear the latch click shut. You may need to press on the latch to get it to latch closed.



Do not attempt to close the cabinet doors while the latch button is pressed in. This will break the latch. Always make sure the button is out before attempting to close a cabinet door.



It is not recommended to keep large, round, and/or heavy objects in a cabinet unsecured as they may roll around and apply excessive pressure to the inside of the cabinet doors as you drive. The objects may shift position with vehicle motion and cause injury when the cabinets are opened. For this reason, Ewin Hymer Group NA recommends that you are aware of the objects that you store in overhead cabinets.



Hidden latch along edge of cabinet door

Galley Cabinets

Immediately beneath the galley countertop there is a drawer with a pull knob to the right of the food preparation surface to hold silverware and small cooking utensils. The left panel is fixed, and is not a drawer.

The two cabinets below this panel on the left provide storage space for food and larger cooking utensils. The water heater is at the bottom of the left cabinet, but there are shelves above this, and more shelves in the right cabinet for the entire height of the cabinet. There are three more drawers on the right below the top drawer and the pull-out table, with hidden latches on the right side, by the driver's seat.



Lights

All cabin lights use 12 volts and are powered by the coach batteries, so the battery disconnect switch must be on for any of these lights to work.

The fluorescent lights turn on and off with the integrated switch at one end of the light fixture. There are three fluorescent lights down the center aisle, and one more over the galley.

The four oval and round LED ceiling lights in the back and the two more oval lights over the driver and passenger seats up front are all individually controlled, and are tap lights - to turn them off or on, press on the lens area. These LED lights use very little energy, and a good way to conserve battery power is to use them, rather than the fluorescent lights, whenever possible.



LED tap light



Fluorescent light

Tables

There are front and rear tables to use either the front or rear lounge areas for dining, playing cards, or computer use.

The front table top is stored behind the driver's seat. The rear tabletop is stored under the driver's side rear bench seat, and both table legs are stored in the wardrobe to the right of the bathroom.



Rear dining area



Front lounge area

There are front and rear tables to use either the front or rear lounge areas for dining, playing cards or computer use.

Front Table

The front table top slides out from the galley cabinet. It does not have a table leg. To stow the front table, slide it back into the cabinet.



Front table in place



Front table in cabinet



Front table drop leaf snap hinge

Rear Table

The rear tabletop is stored under the driver's side rear bench seat, and its leg is stored within the wardrobe.

The dining table for the rear seating area is located under the driver's side rear bench cushion, directly across from the TV. Lift the cushion and remove the table top. The table leg is located in the cabinet behind the driver's seat. Unscrew the T-nut on the end of the leg fully. Insert the T-nut into the slot in the table leg base. Rotate the leg clockwise until you feel it tighten. Pull on it to check that it is secured. If not, extend the T-nut fully by unscrewing it, and try again. Place table top on the table leg so that the top of the leg fits into the socket underneath the table.

Store the table top under the cushion with the socket seated in the hole in the side bench base, and return the table leg to the proper location and clip into place for proper storage.



Rear table T-Nut



Table leg stowed



Rear table set up for use

Front Captain's Seats



The seats must be set as far forward as possible prior to swiveling, otherwise the plastic trim will be damaged.

The two captain's seats in the front of your I90P are adjustable fore and aft by pulling up on the bar under the front of the seat, and will swivel when the swivel lever - the black metal tab on the side of the chair base - is pressed up. Always return the seats to the forward-facing position when driving. They will lock into this position, and stay locked until the swivel lever is raised again.

To create a front lounge area by rotating the two front seats to face the back, first ensure that the seats are fully upright by loosening the recline adjustment and bringing the backs of the seats forward. Do not attempt to pivot a reclined seat. Use the fore-and-aft adjustment while pivoting the seats to allow the sides of the chairs to clear the armrests on the vehicle doors, the engine cover, and other obstructions. Do not force the seats around. Swiveling the driver's seat may require you to loosen the tilt steering wheel adjustment and move the steering wheel as far forward and up as possible.



Front seat swivel tab

Second Row Seat

If you have the standard bathroom, you have a third seat just inside the side door. The second row seat has an adjustment to the seat back and bottom cushion to change the seat back angle for more comfortable seating. The back lifts up and is held by a pin in a slot (see photo below). The seat bottom cushion can be lifted and moved forward approximately three inches (8 cm) to its alternate position because of the way it is mounted to the seat base. Moving the bottom cushion forward and flipping the small panel at the base of the seat back out will configure the second row seat in a more reclined position.



Second row seat back pin and slot



Back seat configured in reclined position

Ventilation

Your Roadtrek is equipped with a ceiling mounted ventilation fan.

The fan has a cover that must be raised by turning the large knurled knob before the fan will operate. Raise the cover, then use the remote control to the desired speed and temperature.

There is also a fuse in the body of the fan, in addition to the fuse in the distribution panel. See the Distribution Panel section for details. Check both this fuse and the one on the 12 volt fuse panel if your fan stops working.

For more details, please refer to the fan manual.



Turn the fan off and close the cover completely before driving. The cover will rattle and might be damaged by wind pressure if you drive with it open.



When using the aisle shower, leave the fan off, or the shower curtain will be sucked in and stick to you.



Window Treatments

The skylight windows in your Roadtrek can be covered using the covers stored above the side door. Place the cover against the glass and use the locking tabs to hold it in place. The smooth side faces the interior of the cabin; the side with the smaller panel attached goes toward the glass.

The window curtains for the regular windows slide on tracks. It's best to use two hands, one at each track, to pull curtains closed and open.

The curtains have snaps and clips at the end of the track to hold them in place. The front curtain meets in the middle and is secured with hook and loop fasteners along this edge..



Skylight covers



Curtains



Skylight cover storage



Curtain rails and clips

Front Window Treatments

❌ Never attempt to attach any sort of fastener or track above the front doors. The airbag could deploy causing severe injury. Worse, once installed, the airbag could then launch your fasteners directly at your head at 200MPH.



Chevy side curtain airbag



Use the attached pull tab to pull each half of the screen to the center. Use the attached hook and loop fastening to join the two sides of the screen together at the center.



Once in place, attach the leading edge of the side curtain to the A pillar using the hook and loop fasteners



To attach the side curtains, open the window slightly and the put the top curtain pocket over the glass. Close window to hold curtain in place

Sleeping Facilities

Your Roadtrek has beds that can be set up as either a king bed or two twin beds. Experiment with different configurations to find what works best for you.

Power Sofa



Sofa switch



Power sofa



Twin beds



King bed

The switch to lower the sofa into the bed position is located next to the thermostat on the passenger side in the rear.

The seatbelts for the power sofa are attached to the floor behind the power sofa. In order to use the power sofa as a seating position while driving, these seat belts must be threaded up through the gap between the seat back and bottom and used together with the shoulder belts to secure passengers in these seating positions.



Make sure that there are no obstructions in the travel path both above and below the sofa.



Do not ride the sofa while it is moving.

Twin Beds

You create two twin beds by lowering the sofa. The sofa makes a continuous sleeping surface with the two bench seats, leaving the center aisle to make it easy to get in and out of bed.

King Bed

To make a full size bed, slide the panel under the passenger side bench seat out into the open space between the two bench seats, and secure it into the notches on the two inner surfaces of the bench seat bases. Move the bottom cushion for the bench seats together over this panel, and place the smaller seat back cushions for the bench seats between these and the outer walls of the Roadtrek.



Panel to support cushions for king bed

Optional Folding Mattress for Front Seat Bed

To set up a front bed with the optional folding mattress, turn the front passenger side captain's seat so that it is facing outward toward the front door, remove the second row seat back by lifting it up, and place the optional folding mattress on the front and second row seat bottom cushions. With the front seat facing the door, slide it as far back (toward the center aisle) as possible to accommodate the folding mattress.

This configuration is only possible with the standard bathroom - enclosed bathroom models do not have the second row seat.



Front captain's seat in position for folding mattress



Passenger side folding mattress in position

Bathroom Facilities

Enclosed Bath

Door

The bathroom doors are secured by a pin which is attached to the right door. To secure the doors for driving, close the left door first, then the right door, and then push the pin down so that it engages behind the lip at the front of the bathroom floor. This will prevent the doors from swinging open when the vehicle is in motion.

Toilet

The enclosed bathroom in your Roadtrek contains a marine toilet. To flush the toilet, press the foot pedal located at the bottom of the front of the toilet bowl.

Shower

To take a shower, unscrew the drain stopper in the center of the bathroom floor. Release the hook and loop fastener straps retaining the shower curtain, and slide the shower curtain along its track to enclose the shower space. Attach the shower hose to the water outlet just behind the bathroom sink faucet handles, and pull up on the knob on the faucet spout. Adjust the water to the correct temperature. There is a water cutoff on the shower head to help you conserve water while showering.

You can shower in the enclosed bathroom by pulling the shower curtain across the shower curtain track near the bathroom doors, or you can shower in the aisle by extending the shower curtain around the longer loop of shower curtain track which goes around the ventilation fan in the roof, and opening the drain in the aisle by removing the flat cover plate and unscrewing the drain stopper.

When finished, either air or towel dry the curtain before storing it, refasten the drain stopper to prevent the contents of the gray water tanks from sloshing up into the shower area while driving, and remove the shower hose from the sink connection. Push the knob back down to change the sink back into normal mode.





Shower connection and knob



Shower curtain and light



Shower curtain deployed for enclosed bathroom shower



Aisle shower drain



Shower curtain deployed for aisle shower

Exhaust Fan

The 210 has an exhaust fan in the bathroom. Push up on the white bar to open the vent, and, and turn on the fan by pushing the power button. Pull the white bar back down to close it. Do not drive with the vent open.

Outside Shower

The outside shower is located on the driver's side, towards the rear wheel. See Outside your Roadtrek for more details on location.



Exhaust fan



Outside shower connection

Appliances

TV and Home Theatre System

The TV and DVD player are located in the rear on the passenger side.

Both the television and the DVD player use 120 volt current, so the inverter, generator, or shore power must be used. They are supplied with remote controls.

See the HOWTO: Cable and TV Reception for antenna connections and configuration details.



TV bracket release



DVD player

Antenna and Cable Connections

There are two antenna connections in the cabinet above the DVD player. One is labeled for the antenna, the other for cable TV. Connect the cable to the appropriate jack.



Rear speaker
control switch



TV antenna
and cable
connections

Controlling the Rear Speakers

The surround sound system offered in your Roadtrek allows you to control the rear speaker sound in your vehicle. Locate the speaker switch which can be found in the cabinet above the home theater system.

- Surround Setting: Allows back speakers to function as part of the TV/home theater system
- Off Setting: Turns the rear speakers off
- Automotive Setting: Connects the rear speakers to the front dash radio

! If you are experiencing problems with your TV reception while using the over-the-air antenna, check the connection to the antenna system booster located in the cabinet above the home theatre system is plugged in.

! If power is getting to the antenna, an indicator light both on the antenna itself and on the connection located in the cabinet will be illuminated.

Hot Water

The 210 Popular is equipped with a 6 gallon water heater. The heater requires both 12VDC and propane for proper operation. See Monitor Panel for location and operation of the switch for the heater.

Refer to the Owner's Manual for maintenance.

Refrigerator

The refrigerator is a 12VDC compressor model which that runs on DC (battery) power, AC (shore / generator) power. It will switch automatically between the modes.

For details of operation please refer to the refrigerator owner's manual.

Oven

The oven is a standard microwave / convection oven. It operates much the same as the microwave at your house. It is probably lower powered, so cooking may take a bit longer.

You must 120V AC power available to use the microwave. See Electrical System for details.

Stove

The propane stove needs fresh air for its safe operation. Make sure to open a window and open turn on the overhead fan for proper ventilation.

Refer to the Owner's Manual for details of operation.



Outside Your Roadtrek

Awning



Stowed awning



Awning power switch



Awning attachment

Your Roadtrek has an electric roll up awning. The control for the awning is located above the passenger door on the inside.

To open the awning push the rocker switch and the awning will extend. Lower the supports on each side and secure them to the two attachment points on the side of the Roadtrek. Refer to the awning manual for the proper way of securing the awning supports to the attachments. To stow the awning, detach the supports, stow them in the awning housing, and retract the awning. Electrical awnings have the switch inside the passenger door above the side window.

Awnings are susceptible to damage from wind, and for this reason should never be left extended when you are away from the vehicle. If a thunderstorm or other windy weather is imminent, stow your awning until the wind calms down.

 The awning is only powered when the ignition switch is off. To use the awning, turn off the ignition.

Exterior Access Doors

Battery Access Door

The door just in front of the rear tire on the passenger side is for the batteries. These are maintenance free AGM batteries. There is no user maintenance possible on these batteries except keeping them charged - you never have to add water to them.

Driver's Side Doors



Driver's side access door

On the driver's side, there are 3 doors that house items that you will use.

The small access door directly behind the driver's door has the dump valves for the gray and black tanks.

The center door has a storage area for the waste water discharge hose and power cord. The smaller door just in front of the rear tire has the outside shower.

The rear access door has the shower and cable TV connection.



Driver's side front access door showing tank dump valves

Directly above the center access door and below the galley window you will see two vent hatches. The rectangular one is for the refrigerator and the square one is for the water heater. The water heater will vent hot gasses when the water heater is running.



Do not block either of these two vents. Dangerous fumes can enter the vehicle if you do.



Since all these sources of open flame are near the fuel fill door on the driver's side, please ensure that all propane appliances are off when refueling your Roadtrek. In addition to making sure your main propane tank valve is shut whenever the vehicle is stored or in motion, turn the battery disconnect switch off when refueling - this will disable the water heater igniter, the refrigerator igniter, and the furnace.

Propane Access Panel

The propane access cover is located in the rear, at the center of the bumper. Flip the side latches to expose the tank valve and filler.

Exterior Shower

The outside shower hose attaches to the faucet inside the rearmost driver's side storage compartment, behind the rear wheel. This faucet provides hot and cold running water from the same sources as your inside faucets. When finished, disconnect and store the shower hose and nozzle.



Outside shower faucet



Driver's side center access door houses power cord and waste discharge hose



Propane access cover

Optional Rear Door Screen

Roadtrek's have an optional rear screen which allows you to open the rear doors and get fresh air and a better view, without bugs coming in or pets going out. If you ordered this option, look for this screen in the white box that comes with your new Roadtrek. The screen attaches to the rear door frame and cargo area floor with a zipper and hook-and-loop fasteners.



Surround with zipper



Hook and loop fastener for
bottom edge of screen



Start the zipper on the left side



Installed screen



You can access the underbed
storage area without removing
the screen

Open the screen and locate the edge with hook and loop material along it. This edge is the bottom, so use the hook-and-loop strips on the screen to attach it across the bottom of the door opening.

Start the zipper at each bottom corner by pushing the bottom stop (the metal end) of the zipper into the two back-to-back zipper sliders, and zipping the top slider upward. At the top, close the flap with the hook-and-loop fastener strip where the zippers meet.

Use the double slider to unzip the bottom of the screen to allow access to the underbed storage area in the back of the Roadtrek without disturbing the top section.

To remove and stow the screen, unzip it from the top down. Unzipping it from the bottom will not allow you to remove it from the doorframe surround.


Optional Side Door Screen

In addition to the rear door screen, there is also an optional side door screen which will allow you to keep the side door open for ventilation without admitting insects. There is a zipper in the screen so you can enter and exit without removing the screen.

Locate the screen in the white box that comes with your new Roadtrek, and shake it out. To orient the screen correctly, look for the zipper in the screen - hold the screen so that the zipper goes across near the top and then down the right side. Start the hook and loop fastener at a convenient corner and work your way around the perimeter until the screen is secured.

To enter or exit the vehicle through the side door while the screen is installed, unzip the opening and step through. There is a zipper tab on either side so you can fasten it behind you once through.

While sturdy enough to keep insects out, neither this screen nor the rear screen are designed to resist repeated and persistent attempts by pets to get out of the vehicle. Do not leave your pets unattended with the screen in place and the door open. They may take themselves for a walk.

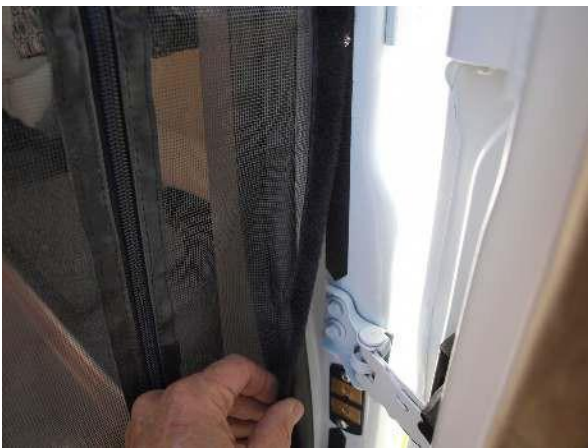

Hook and loop fastener for the side door screen



Access through the screen



Installed screen

Utilities

Just like your house, your 210 Popular has fresh water, electricity, waste water disposal, heating, and cooling systems. In the 210 Popular, these systems are self-contained and travel with you.

Your vehicle should be reasonably level to allow normal operation of the system.

Fresh Water

Standard Edition

Fresh water is contained in two tanks, called the exterior and interior tanks. The exterior tank is underneath the driver's seat outside the passenger compartment and thus exposed to the elements, so it is susceptible to freezing. The interior tank is inside the Roadtrek underneath the rear lounge area, and will allow you to carry and use water in mildly sub-freezing conditions.



Tank isolator valve shown in open position (black plastic handle horizontal pointed along the water line)



City water connection for hooking up to pressurized water

The two tanks are connected by the tank isolator valve located next to the water heater. There are two fill locations.

- The fill for the exterior tank is in the door post of the front driver door, near the door handle. Look for the orange plug in the fill port. Running water into the fill port will fill the exterior tank only - approximately 17 gallons.
- The tank selector valve determines which tank the water pump draws water from. It is a long handle with a plastic cover, usually red or yellow in color, located next to the water heater, behind a door down at floor level to the left of the refrigerator. See photos below for how to position the valve to draw from the exterior or interior tank. In summer mode, this handle is in the exterior tank position, and the tank isolator valve is open. In

summer mode, you don't have to worry about which tank has water - with the tank isolator valve open, water from the interior tank replenishes water from the exterior tank as it is used.

- To fill the interior tank only, close the tank isolator valve and set the tank selector valve to the interior position. The interior fill is located in the rear door on the right side. With the tank isolator valve closed, running water into this fill port will fill the interior tank only - approximately 10 gallons.
- To fill both interior and exterior tanks, open the tank connection valve and set the tank selector valve to the exterior position. Fill exterior tank first, then interior tank.

 Roadtrek recommends that you use a dedicated single purpose potable-water hose. These are usually white in color. Buy a new one and use it only for filling your tanks and connecting to city water. View any hose lying around a campground with extreme skepticism, especially if there's a wastewater dump nearby. Large RVs use hoses to flush their wastewater system. Always flush faucet and hose thoroughly before use.



Exterior tank fill location (driver's side door pillar)



Interior tank fill location (rear door, right side)



Tank selector valve in exterior tank position



Tank selector in interior tank position

City Water

Your Roadtrek can operate in either fully self-contained mode, or can be connected to a water supply such as a campsite's faucet.

The city water connection is in the driver's side rearmost compartment. Unscrew the white plastic protective cap and connect your clean hose to the water faucet and a water pressure regulator attached to this connection point. Turn the faucet on and check for leaks, tightening the connections as necessary.

For more details, please refer to the HOWTO: Potable Water Use section.

Summer and Winter modes

The water system in your Roadtrek has an exterior and interior water tank. In summer mode (above freezing) both tanks can be used. In mildly sub-freezing conditions, the exterior tank must be drained and the system set to winter mode. See the HOWTO: Summer and Winter Mode for a concise description of how to operate your system in either mode. In temperature's lower than mildly sub-freezing, or any freezing temperatures when the Roadtrek is not constantly heated, you must winterize.

Summer Use

In summer mode, both the interior and exterior tank are used to store fresh water. The tank isolator valve in the water line connecting the two tanks is open, and water is drawn from the exterior tank by setting the tank selector valve to the exterior tank position. As water is used from this exterior tank, the interior tank, which is positioned higher in the vehicle, drains into the exterior tank by gravity, thus providing you with full use of the combined capacity of the two tanks. The valves to the outside shower are open, allowing use of that facility as well.

Winter Use

In winter mode, only the interior tank is used to store fresh water. The tank isolator valve in the water line connecting the two tanks is closed, and the exterior tank is drained. The interior water tank has a capacity of approximately ten gallons, and this water is protected in moderate sub-freezing conditions by the tank's position inside the heated vehicle. The valves in the water lines to the outside shower are closed, so it cannot be used, and neither can the city water connection.

Again, please refer to the HOWTO: Summer and Winter Mode section for instructions on how to configure your water system in these modes.

Anniversary Edition Fresh Water System

See Hydronic System.

Water Pump

To use the water in the tank, you need to turn on the water pump. See Monitor Panel for switch location.

Waste Water

Gray Tank

Galley sink, bathroom sink and shower drain water drains into the gray water tank. The shower and sink have traps to prevent tank odors from entering the living space. Be sure to replace the screw-in plug in the shower floor after use to prevent gray water from sloshing up into the shower pan from the gray water tank while driving.

Black Tank

The black water tank holds toilet waste. Please refer to the HOWTO: Waste Water Dumping section for information on which materials you can and cannot flush down the toilet.

Indicators

The gray and black water tank level indicators on the control panel will give you an approximate indicator of your tank levels. When the gray water tank is full to capacity, water will no longer drain down the shower and sink drains, and you need to dump the tanks before running any more water. If you see fluid below the toilet valve in the bowl of the toilet, your black water tank is full and also needs to be emptied before further use.

See Monitor Panel for more information.



Close both the black and grey water gate valves before using the waste water system. It is possible for the valves to open slightly especially after extensive driving. Black and grey water dump valves are accessed through the driver side storage door.

Propane System

Your vehicle is equipped with a propane system which, when properly handled and maintained, will provide trouble and worry free operation of your propane fueled appliances.

The propane tank is located across the rear of the vehicle. To access the tank for filling and to turn the manual tank shutoff valve off and on, turn the two retaining tabs on either side of the access cover, located in the center of the rear bumper, and remove the access cover.



Propane tank main shutoff



Propane tank cover



You must close the tank shutoff valve when the vehicle is not in daily use. Further, you must close the shutoff valve when the vehicle is traveling. Never operate any propane appliance, including the refrigerator, while the vehicle is in motion.



High pressure BBQ pigtail

Heating and Cooling

Thermostat

The thermostat controls the air conditioning unit. Set the thermostat on "cool" and set the desired temperature.

Some models also have a small heat strip in the air conditioning which will blow warm air, but this produces heat directly from electricity and is not recommended for heating the cabin for extended periods of time unless you are attached to shore power or running the engine. For all other circumstances, use the regular heating system to heat the cabin. If your unit has the heat strip option, you can operate it by turning the thermostat to "furnace" and setting the desired temperature.

The third setting, "fan", recirculates cabin air using the fan inside the air conditioning unit.



Heat Pump

The heat pump can provide both heating and cooling for your Roadtrek using electric shore power or generator power. The heat pump gives you the advantage of heating your unit with electricity if you would prefer to use electricity rather than the propane the furnace uses.

The heat pump can be operated normally when you are plugged in to shore power.

If you are running the heat pump using the generator, please follow the following steps.

- Set the battery disconnect switch on the monitor panel to the "ON" position.
- Start the generator and run for several minutes until warm.
- Set thermostat setting above ambient temperature.
- Turn thermostat control to the "low cool" position.
- Turn fan to the ON position.
- Adjust the thermostat on the unit for the desired temperature. The compressor should start automatically.



- Your vehicle should be parked as close to level as possible to maximize the air conditioner's efficiency. If you are parked very much off-level, it is possible for condensate to leak into the living space. If this happens park in a more level location.

You can use the heat pump to warm the motorhome on cool nights. For colder temperatures, below 40°F (4°C), you should use the propane furnace.

Furnace

The furnace is controlled by the combination thermostat located above the rear bed. The furnace requires propane and 12 volt power. The furnace uses much less electricity compared to the heat pump, and can be used without shore power or generator use.

The fan on the furnace is thermostatically controlled, and will continue to run for a minute or so after you turn it off until the firebox cools down.

Keep the aisle in front of the furnace clear of any obstructions when using the furnace to allow air circulation.

The furnace can operate when outside temperatures are below freezing.



Electric System

Coach Batteries

The coach batteries in your Roadtrek are sealed AGM (absorbed glass mat) batteries. Do not attempt to open them. There is no user maintenance possible on these batteries except keeping them charge.

Battery Disconnect Switch

The battery disconnect switch provides power to all 12 volt appliances, such as the water pump, the refrigerator, and so forth. Even the propane cooktop uses 12 volt power to run the burner igniters. This switch should be off when you are not using your Roadtrek, and on whenever you are driving or camping. The "Battery On" light next to it will indicate the position of the switch.



Engine generator



Battery disconnect switch

Charging your batteries

Inverter-Charger

Your Roadtrek is equipped with a inverter-charger which converts 120 volt AC (household current) to 12 volts DC when you are connected to shore power or running the optional gasoline generator. This 120 volt power is used to power your 12VDC appliances as well as charge your batteries. Whenever you are receiving either source of 120 volt power, you are charging your batteries.

Standard Alternator Charger and Battery Isolator

While driving, your Roadtrek will also charge the coach batteries from the vehicle alternator through a separator. The separator allows extra vehicle alternator-produced electricity to charge your coach batteries in addition to keeping your engine (chassis) battery charged. When the vehicle engine is not running, it breaks the electrical connection between your coach batteries and your engine battery, so your engine battery remains charged to start your engine even though you are using coach battery power while camped. This is all automatic - there are no user adjustments possible to the separator.

Optional Engine Generator

Your vehicle may be equipped with an engine generator. The engine generator is mounted on the vehicle engine and is operated by idling the vehicle engine. If your coach batteries are low, start the vehicle engine and let it idle until the batteries are sufficiently charged. Usually 30 minutes of idling are enough to restore moderately depleted coach batteries to a useful level of charge.

As with a conventional generator, always close the rear windows of the vehicle and turn off the roof ventilation fan when the engine generator is charging the batteries to avoid exhaust entering the vehicle's interior.

The engine generator is charging the coach batteries whenever the vehicle's engine is in operation, which means you are also charging them as you drive. You will arrive at your camping destination with fully charged coach batteries.

There is no required maintenance for the engine generator. Note, however, that your vehicle's serpentine belt (the belt which drives the vehicle's alternator, water pump, power steering, etc.) will be different than the one for similar vehicles without the engine generator, so carrying a spare belt may be prudent in case you have a serpentine belt failure while traveling.

Optional Solar Panels



Solar charge controller



Generator switch and hour meter

The optional solar panels will charge your batteries when sufficient sunlight is available. The solar charge controller is installed at the factory for the type of panels and batteries installed on your vehicle, and Roadtrek strongly recommends that you make no adjustments or changes to the charge controller or its programming. The charge controller usually displays either system voltage or amperes generated by the panels.

On Board 120 Volt AC Power



Inverter switch with standard 750 watt inverter



2500 watt inverter switch

Standard 750 Watt Inverter

The standard configuration includes a 750 watt inverter. This inverter provides 120 volt AC (household current) for a few of the outlets in your Roadtrek; primarily the ones running the TV and the DVD player. It is not powerful enough to operate the air conditioner or the microwave.

The inverter is configured at the factory for the batteries and power sources in your Roadtrek. Please do not change any settings without consulting the factory.

Optional 2500 Watt Inverter

If your vehicle has the engine generator option, you also have a 2500 watt inverter. This is sufficient to run all your appliances. However, running large, high-energy appliances such as microwave ovens, air conditioning, toasters, etc. drains your batteries very quickly. If you operate these appliances, do so for a limited time unless you also have additional sources of power.

Instead of the regular inverter switch on the monitor panel, your inverter switch will be on its own smaller panel to the left of the main monitor panel. The switch has three positions: off in the middle position, power save auto in the top position, and power save off in the bottom position.

The powersave auto setting is not recommended by Roadtrek. Newer controllers no longer have this setting. Use either OFF or powersave off settings and turn your inverter on and off as needed.

Pressing the bottom of the switch selects power save off. When this setting is selected, the inverter will be on continuously.

There is a shore power indicator light to the right of the switch to tell you the system is receiving shore power. There is also a battery charging indicator light to tell you when the batteries are being charged by shore power.

Your refrigerator will run on either 12 volt battery power or 120 volt inverter power.

Optional Gasoline Generator

The gasoline powered generator provides up to 2800 watts of power, enough to run all your appliances. Please refer to the Onan Generator manual for operation and maintenance.

Always close the rear windows of the vehicle and turn off the roof ventilation fan to avoid exhaust entering the vehicle's interior.

There is an hour meter to the right of the switch which displays hours of generator use. Maintenance on the generator is scheduled according to hours of use. There is a break-in oil change scheduled fairly early in your generator's use, so check your Onan manual for particulars.



Please be sure to operate the generator at half load or more (at least 1200 watts, either the heat pump or an electric heater) for one hour every month. Failure to do this can lead to internal corrosion, gumming up of the float bowl, and eventual failure.

Shore Power

The shore power connection is through the shore power cord, stored in the driver's side large compartment. See Outside your Roadtrek for location. The switchover from shore power to inverter is automatic.

To connect to external (shore) power, open the side compartment and remove the power cord. Plug the power cord into the campsite 30 amp power source. See HOWTO: Shore Power for a concise guide on how to connect and disconnect to shore power.

Outlets

The outlets are operated from the inverter, generator, or shore power. Further, the outlets are protected by GFCI. Only some of the outlets are powered by the standard 750 watt inverter.

The electrical outlets above the galley and under the passenger side rear captain's seat have ground fault circuitry (GFCI) - the button in the middle of the outlet pops out when they sense an anomaly or sometimes when the circuit undergoes transitional conditions. If you are not getting power from an outlet, check and reset this button if needed. The outlet under the passenger side chair powers the TV and DVD player, so check it if your TV is not receiving power.



GFCI outlet under rear passenger side seat

Monitor Panel

The monitor panel is located inside the side door, above the doorframe to the left of the bathroom

Power Sources

The monitor panel controls 2 separate power sources; the 12 volt DC power and the 120 volt AC power via the inverter, shore power, or optional generator.

12 Volt DC Power

The power to the 12 volt DC outlets and appliances is controlled by the battery disconnect switch to the lower left.

On the bottom left is the battery disconnect switch, which supplies 12 volt battery power to the 12 volt light and other cabin appliances. This switch must be on for any of the 12 volt electrical devices to work. Remember to turn off two switches - the inverter switch and the battery disconnect switch when your Roadtrek is not being used to avoid discharging the batteries.

The battery disconnect switch has a blue indicator light to the right of it to show you when the battery power is on.



Monitor panel with standard 750 watt inverter and optional gasoline generator



Battery disconnect



Inverter switch for standard 750 watt inverter



Inverter switch for optional 2500 watt inverter

Inverter

The inverter provides 120 volt AC (household current) to the 120 volt appliances and wall outlets. If you have the optional engine generator and 2500 watt inverter, your inverter switch is back by the thermostat on the passenger side of the rear lounge area. See the Optional Engine Generator and 2500 Watt Inverter portion of the Electrical System section for further information.

Shore Power

Shore power is the name for power supplied by a utility company that you plug into to provide power to your Roadtrek. See HOWTO: Shore Power for a concise guide to plugging in and unplugging from shore power.

Other Switches

Patio Light

On the monitor panel, the top left switch is the patio lights switch. Press the top of the button to turn the lights on, and the bottom to turn them off. These are LED lights and use very little power.



Patio light switch



Water pump switch

Water Pump Switch

The centered switch to the right of the leftmost four switches is the water pump switch. It should be on only when you have water in the fresh water tanks and wish to use the sinks, showers, or toilet. The pump should not be run without water. As with the patio light switch, pressing the top of the button turns the pump on, and pressing the bottom turns it off.

Water Heater Switch

The water heater switch is to the right of the water pump switch. As with all the other switches on the monitor panel, the battery disconnect switch must be on for the water heater to work. Even though the water heater uses propane to heat the water, all the igniters and controls are electrical.



Tank status lights



Water heater switch

Tank and charge indicators

To the right of the monitor panel are the indicator lights for the battery charge level, the fresh water tank levels for each tank, and the black and gray water tank levels. The battery disconnect switch has to be on for this display to work. Press the button for each to see the display. These will give you an approximate reading, to the nearest third, of how much is in each tank. The four indicator lights for the battery are low, fair, good, and charging.

Optional Generator Switch and Hour Meter

If you have the optional 2800 watt gasoline generator, the switch is to the right of the tank and charge indicators. Press the bottom of the switch for about five seconds to prime the generator, then the top to start. Press the bottom again to turn it off.

The hour meter to the right of the switch keeps track of how many hours your generator has been running. There is a break-in oil change after 20 to 50 hours of operation, and other required maintenance at other intervals later on - see the generator manual for details.



Generator switch and hour meter

Distribution Panel

The distribution panel is located over the driver's head on the overhead panel. The 120 volt AC breakers and 12 volt DC fuses are each behind a black plastic panel.



Distribution panel



120 volt AC breakers and 12 volt
DC fuses

AC Breaker Panel

The 120 volt breakers are located on the driver's side on the flat wood panel above the driver's seat, behind a black plastic panel. Flip the cover down and note the sticker under the cover with the identifying information on each breaker. When storing the Roadtrek for the winter, turn off the battery disconnect switch, your inverter, and all circuit breakers in this panel.

12 Volt Fuse Panel

The 12 volt fuses are located to the right of the 120 volt AC breakers. The label on the cover has identifying information for each fuse. These are standard automotive fuses. Always replace the fuses with the appropriate amperage; never replace a blown fuse with one of a larger rating.

Alarms and Warnings

CO Monitor

Your vehicle has been equipped with a combination propane leak and carbon monoxide detection device for your protection. It is located slightly above floor level directly behind the rear bathroom door. Be sure the detector is operating while using your vehicle, especially when you are asleep inside it. When storing things on the floor, do not block air circulation to the propane leak detector. You should be able to see it at all times from the front of the vehicle.

The detector runs on 12 volt power, and is operational whenever the battery disconnect switch is on. There is no separate switch for the detector. There is an indicator light on the detector so that you can tell whether it's working or not. For this reason, whenever the vehicle is occupied the battery disconnect switch should be on the "on" position.



Coach power on the Monitor Panel must be on for detector operation. Make sure your battery disconnect switch is on.



Do not disable, unplug, or otherwise hinder the operation of this detector or the smoke detector.



The detector has a useful service life, beyond which it needs to be replaced. See Manufacturer's Owner's Manual for other operating instructions, or look for the sticker which is sometimes placed on the detector to see the replacement date.



The detector may chirp if the coach batteries are running low.

Smoke Detector

The smoke alarm is located to the right of the Monitor Panel. It requires a commonly available 9 volt battery and periodic replacement of both the battery and the unit as a whole. Please refer to the Owner's Manual for the unit in your vehicle.

Fire Extinguisher

Your Roadtrek comes equipped with a dry chemical fire extinguisher suitable for all fires. Before every trip, check to see that the needle on the dial is in the green range. If not, replace the fire extinguisher. **DO NOT** test your fire extinguisher by discharging it - total discharge time is 8 to 12 seconds, so it will become rapidly depleted if you test it this way. Service life on fire extinguishers currently supplied is 12 years; replace the fire extinguisher if it is more than 12 years past the year of manufacture stamped on the base of the cylinder.



Propane and Carbon Monoxide alarm



Maintenance

Tires

See the automotive chassis manufacturer's owner's manual and documents for tire warranty information. Inflation pressure information is on the sticker inside the galley cabinet door. The current Chevrolet Express manual recommends checking tire pressures regularly - at least every other week, and definitely before a long trip. Tire rotation intervals depend on wear and other factors, but tires should be rotated at least every maintenance interval - every 40,000 km/24,000 miles. Follow the tire rotation pattern for dual rear wheel models in your owner's manual.

Occupant Cargo Carrying Capacity (OCCC)

See the information labels attached to the driver door post, and the inside of the lower galley cabinet door.

Owner Maintenance Checks

Listed below are vehicle maintenance checks and inspections that should be performed by the owner or qualified service technician at the indicated intervals. Any adverse conditions should be brought to the attention of your dealer or qualified service technician for expert service advice as soon as possible. The owner maintenance checks are generally not covered by warranties and you may be charged for labor, parts and supplies used.

When You Stop for Fuel, or Weekly

- Check engine oil level.
- Look for low or underinflated tires.

Every Other Week

- Check tire pressure on all tires and your spare.

At Least Monthly

- Check coolant level in the coolant recovery reservoir.
- Check windshield washer fluid, brake fluid and power steering fluid levels.
- Check operation of all exterior lamps, including brake lamps, turn signals and hazard warning flashers.

At Least Every Three Months

- Flush water to the toilet cassette. Use a hose or bucket to fill the tank through the toilet and dump. Flush gray water holding tank. Use a hose or bucket to fill the tank through the galley sink and dump.
- Flush and sanitize fresh water tank. To flush the tank:
 - Fill it completely using the city fill and drain using the fresh water tank drain underneath the tank.
 - Sanitize by adding 1/2 cup chlorine bleach to the tank, fill with water, let sit for at least two hours, and drain. 1/2 cup vinegar added to the next tankful, which will also be drained before filling with fresh water for use, will help dissipate the chlorine smell.

Refer to other sections in this manual for drain and fill locations.

At Least Twice a Year

- Check windshield wiper operation.
 - Clean wiper blades with clean cloth dampened with washer fluid.
 - Wiper blades should be replaced at least once a year.
- Check radiator, heater and air-conditioning hoses for leaks or damage.
- Check for worn tires and loose wheel lug nuts.
- Check parking brake system and put the brake on and see if it will hold on a moderate hill. If not, get it repaired.
- Check head lamp alignment.
 - Shine your low beam headlights on a wall. The light patterns should be the same height. Measure headlight height at the vehicle with a yardstick and the light patterns should be the almost same height or slightly less with your vehicle level. If not, get the headlights aligned.
- Check lap and shoulder belts for wear and function. Replace any belts with frayed spots or that do not smoothly retract into their holders.
- Inspect appliance vents to ensure they are free from dirt, insects, spider webs and/or nests.

- Inspect gray water tank vent and remove any debris or other obstructions. The gray water tank vent is on the roof, passenger side and in the bathroom area.
- Clean air conditioner filter. See air conditioner manual for details.
- Thoroughly clean and wax the roof of the van.
 - To wash the solar panel, use a garden hose to rinse dirt off the panel.
 - Do not scrub it with a brush or otherwise apply any abrasive material to the solar panel surface.
 - Rinsing the panel two or three times a year to remove excess dirt is all you need to do to keep the panel operating at full output.
- With the tank empty, add one cup of mineral oil and one cup of hot water to the gray tank.

At Least Once a Year

- Lubricate all door hinges, locks and latches, especially the exposed hinges on exterior doors. These will freeze up and cause damage to the doors if neglected.
- Have appliances tested and cleaned.
- Wax and polish and protect exterior surfaces. The wheels are coated aluminum and there is no bare aluminum on the vehicle, so do not use aluminum polish on any surface of your Roadtrek.

To prevent water from entering your vehicle, avoid spraying water directly into exterior vents or grills. Do not use a power washer to clean your Roadtrek because damage to the paint, removal of decals and water leaks will result. Hand washing or commercial car washes accommodating large vehicles are the best way to keep your Roadtrek clean and shiny.

Other Maintenance Checks

Follow the maintenance for your appliances as per the appliance's manufacturer's manual.

Spare Tire Storage



Spare tire retaining pin



Spare tire lift hatch



Supplied with your new Roadtrek are two types of small keys. One is for the storage compartments, and the other is to unlock the chrome surround on your spare tire. Find both keys, put one of each on your key ring, and carry them with you whenever you drive your Roadtrek. If you ever need to change a tire, you will need this key.



If your new Roadtrek still has the blue protective coating on the chrome spare tire cover, remove it as soon as you can. If left on for an extended period, particularly in the hot sun, it will become very difficult to remove.

In order to open the driver's side rear door, you must lower the spare tire.

To lower the continental kit spare tire and gain access to the driver's side rear door of the Roadtrek, unlatch the retaining spring and pull the pin out while supporting the top of the tire with your other hand. It helps to wiggle the tire back and forth to allow the pin to slide out. Place the pin where you won't lose it, and grasp the top of the tire with both hands. Lower it into a horizontal position to allow the driver's side rear door to open freely. The tire will latch when horizontal.



While the tire is spring loaded it is still fairly heavy. Use proper lifting technique or get help.

To raise the spare tire back into position, lift the guard over the cable mechanism enough for the catch to clear and allow the tire to be raised. Raise the tire back up into position, and insert the pin. Flip the retaining spring over the end of the pin to secure it.

To use the spare tire, lower the tire, unlock the chrome surround with the key supplied with your Roadtrek, unbolt the tire from the carrier with your lug wrench, and lift the tire off the carrier. Follow the Chevrolet manual for instructions on the use of the jack and other tire change procedures. Install the flat tire on the spare tire carrier and reattach the chrome surround.



Do not attempt to raise an empty tire carrier - if you change the tire, put the flat on the carrier before attempting to raise it. NEVER release the latch on a tire carrier without a tire on it. The spring will move the arm of the carrier upward with great force and speed.

Obtaining Service

When your Roadtrek needs service, determine if the issue is with the Roadtrek upfits or the GM chassis.

For Roadtrek upfits, contact your dealer. Start with the service writer, then the service manager and finally, if you are unable to resolve your issues with the service department, contact the dealership managing partner or owner. Please keep notes of who you spoke with and dates.

For chassis-related issues, contact GM service. Advise the service writer that you have a g-30 1 ton van, rather than a "motorhome". Some dealerships do not want to work on motorhomes, but most can service a 1 ton van. Again, start with the service writer, then the service manager, and lastly, if you are unable to resolve your issues with the service department, contact the dealership managing partner or owner. If you cannot resolve your chassis related issues at the dealer level, contact GM's factory service.



Erwin Hymer Group NA typically cannot initiate a case with the chassis manufacturer, the owner must do that.

Contact Erwin Hymer Group NA Service after you have exhausted the process above. Please provide as complete a record as you can so that your effort is not duplicated.

Erwin Hymer Group NA Service information:

retailservice@erwinhymergroupna.com

1-844-496-3735

Specifications

For general chassis specifications, please refer to the GM manual. For specifications relating to your vehicle, including occupancy, weight rating, tire size, inflation, and so on refer to the sticker on the driver's side B pillar (right side of the door frame, near the latch). This specification refers to the baseline Roadtrek upfits. Options and upgrades may change these specifications. Roadtrek upfits only.

This applies to Erwin Hymer Group NA upfits only.

Total fresh water capacity (includes water heater)	36 gallons/136 liters
Fresh Water tank capacity	223 gallons/114 liters
Gray water tank capacity	23 gallons/85 liters
Black water tank capacity	10 gallons/38 liters
Battery type	AGM, maintenance free
Battery capacity	190 AMP hours (standard)
Propane tank size	10 gallons/38 liters
Propane tank capacity at 80%	8 gallons/30 liters
Water heater capacity	6 gallons/28.5 liters
Furnace	16,000 BTUs/hour
Refrigerator	2-way (12VDC, 120VAC)
Air Conditioner	10,000 BTUs/hour

Warranty

Industry Leading – Six Year Transferable RV Warranty

Six year unlimited mileage/km motorhome warranty, covering the manufacturer of the motorhome, appliances, electronics, plumbing and EcoTrek batteries. Original warranties on appliances/electronics/plumbing will be applied first.

Chassis Manufacturer Warranty

The automotive chassis is warrantied by the automotive manufacturer. Please refer to the chassis manufacturer warranty information for details.

Appliance Warranty

Appliance warranties are not initially warrantied by Erwin Hymer Group NA but are covered by individual warranties offered by their respective manufacturers, to which terms both Purchaser and Dealer must comply. Please refer to your warranty information for a list of appliances that apply.

AGM Battery

The AGM batteries have a normal one year manufacturer's warranty.

Registration

Please send the following form in or email the information to sales@gohymer.com when you purchase your Hymer.

CHANGE OF OWNER NAME OR ADDRESS FORM

IMPORTANT - To owner with New Address or Used-Vehicle Buyer -
complete and mail for accuracy of recall mailing records

PLEASE TYPE OR PRINT LEGIBLY:

1. VEHICLE IDENTIFICATION NUMBER (17 Character number found on top left instrument panel)

2. PRINT Last Name (including Jr., Sr., etc.)

3. PRINT First Name (or Initial) and Middle Name (or Initial)

4. PRINT NEW mailing Address: House/Building Number and Street Name (including St., Ave., Rd., Ct., etc.)

APT./Suite No.

or

P.O. Box No.

or ☐ RR/ ☐ HCR

☐ RR/ ☐ HCR Box No.

City

State

ZIP Code

ZIP +4

Phone No.

Prov.

Postal Code

Month

Day

Year

Email Address

Current Date

Questions or concerns?: sales@roadtrek.com



Regulatory Notices

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration, (NHTSA) in addition to notifying Erwin Hymer Group NA.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, and/or Erwin Hymer Group NA.

To contact NHTSA, you may call the Auto Safety Hotline toll-free at 1-888-327-4236, (or 366-0123 in Washington, DC area) or write to:

NHTSA
U.S. Department of Transportation Washington, DC 20590

You can also obtain other information about motor vehicle safety from the NHTSA Hotline.