

How To Guide

2016 SS Agile



HOW TO: Shore Power

Connecting To Shore Power

Your Roadtrek has a shore power cord, which is stored beneath the sofa. Plug the large yellow end of this cord into your shore power connection point directly in front of the driver's side rear wheel in the rear utility bay.

This plug goes in only one way - find the prong with the right angle (L-shaped) on the cord end and on the socket, and align them. Once the plug is pushed in all the way, turn it slightly clockwise to lock it into place and tighten the black plastic threaded ring around the outside of the socket.



Power cord stored under sofa



L-shaped prong on plug, and corresponding L-shaped hole in cord end



Attached shore power cord

To disconnect, unthread the black plastic ring and rotate the plug slightly counterclockwise to pull it out.

Campsite Power Connections

Most RV parks and campgrounds have AC power of various voltages and amperages available at each site. The power will typically be in a pedestal with a cover that flips up. If you cannot find your power pedestal or you're not sure how to open it, ask the campground personnel.




50A / 240VAC outlet



30A / 120 VAC outlet



15A / 120 VAC outlet

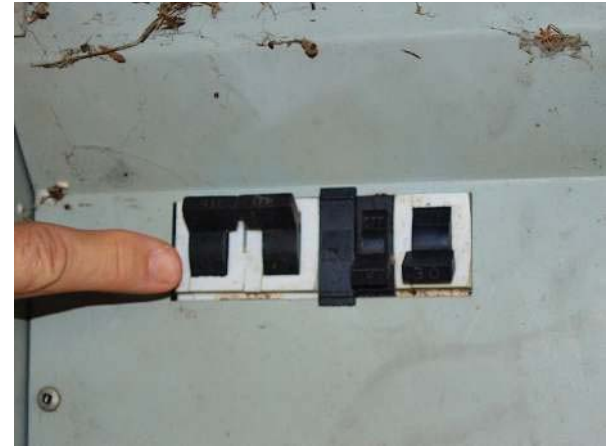

Breakers

A typical campsite's power pedestal will have three types of plug-in receptacles: 15 amp, 30 amp and 50 amp. The 15A receptacle is typically the same as you would find in your home. The 30A and 50A receptacles are specific to the RV industry. Other receptacles look similar but may not be wired the same. If in doubt, check with campground personnel.

The pedestal will also typically have individual breakers for the 15A, 30A, and 50A services. Many campgrounds turn off unused breakers so check that the breaker for the plug you will be using is turned on.

Your Roadtrek is equipped with a 30 Amp cord. Most power pedestals have a 30 amp receptacle.



15A to 30A adapter



50A to 30A adapter

It is possible that a campground (or perhaps a friend's driveway) will not have a 30A receptacle available for your use. You can purchase a 15A to 30A adapter and connect to an ordinary 15A household outlet.

Be aware that in those situations, you will have limited power compared to a 30A circuit. You will be able to run a single large appliance at a time; you may need to turn off your air conditioner if you want to use the microwave, for example.

If you exceed the current capacity of the receptacle you may pop the breakers in the pedestal. If this happens, turn off some appliances and reset the breaker.

It is also possible that you will find a 50A receptacle. Again, you can purchase a 50A to 30A adapter. In this case your power should not be limited as you will have the full 30 amps available. Although you are connected to a 50A service, you can only draw 30A; there is no advantage to connecting to a 50A service if a 30A service is available.